

# PROGRESS®

Est. 1931

## 5 KG TAB SCALE

### SAFETY INSTRUCTIONS

This product is not a toy.

This product contains no user serviceable parts.

Improper repairs may place the user at risk of harm.

Keep the product out of the reach of children.

Do not immerse the product in water or any other liquid.

Do not attempt to dismantle the product.

Do not place or store the product near direct sunlight or direct heat sources or in a damp environment.

This product is a high precision device; handle it with care.

Incorrect use of the product may cause damage.

The manufacturer is not responsible for any injury or damage occurring from incorrect usage or handling.

This product is intended for domestic use only. It should not be used for commercial purposes.

### BATTERY SAFETY

Do not short-circuit a cell or battery.

Check that the battery compartment is secure.

Batteries are to be inserted with the correct polarity.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

In the event of the batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children. Remember to keep button cell batteries away from children at all times as they can easily be swallowed.

Seek medical advice immediately if a cell or battery has been swallowed.

Exhausted batteries must be removed and disposed of safely.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.

This product requires 1 x 3 V CR2032 button cell battery (included).

### CARE AND MAINTENANCE

Clean the scale with a soft, damp, lint-free cloth. Do not use harsh or abrasive detergents to clean the scale.

Always use the scale on a flat, hard surface.

### GETTING STARTED

Remove the scale from the box.

Remove any packaging from the scale.

Place the packaging inside the box and either store or dispose of safely.

To activate the battery, turn the scale onto its back and pull out the tab from underneath the battery.

### IN THE BOX

5 kg Tab Scale

### INSTALLING AND REPLACING THE BATTERY

**STEP 1:** To replace or install the battery, turn the scale onto its back and remove the battery cover, then the exhausted battery.

**STEP 2:** Insert the new battery (1 x 3 V CR2032), observing the correct polarity, then replace the cover.

**Note:** Take care when removing the exhausted battery and make sure to dispose of it properly.

## USING THE 5 KG TAB SCALE

### UNIT CONVERSION


To switch between weight units, press the 'MODE' button to cycle through the available options.

### TO BEGIN WEIGHING

**STEP 1:** Place the scale onto a flat, stable surface.

**STEP 2:** Place a suitable bowl (if needed) onto the scale before turning it on.

**STEP 3:** Press the 'ZERO' button to activate the scale. Wait for the LCD display to show the weighing screen.

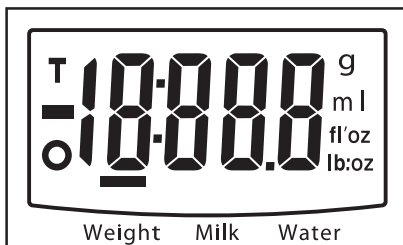

**STEP 4:** Place the weighing objects onto the scale and the LCD display will show the weight.

### ZERO FUNCTION

To weigh different items consecutively without removing them from the scale, place the first item onto the scale and take the weight reading. Press the 'ZERO' button to reset the scale reading to '0' before adding the next item. Repeat as is necessary.



### TO SWITCH OFF MANUALLY

Press and hold the 'ZERO' button.

### AUTOMATIC SHUT-OFF

Automatic shut-off occurs if the scale has been inactive for approx. 2 minutes to preserve power. To activate the scale again, press the 'ZERO' button.

### WARNING INDICATORS



**LOW POWER:** Replace the battery.



**ERROR:** Maximum weight exceeded (5000 g/11lb); reduce the weight on the scale.

Please retain this information for future reference.

If this appliance proves unsatisfactory or if you have any further queries, please contact your retailer.

Distributed by:

UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.

Made in China.

CD160719/MD140120/V2

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

