

PROGRESS®
Est. 1931

ELECTRIC
EGG COOKER
Instruction Manual

Please read all of the instructions carefully and retain for future reference.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not overload the appliance; only fill up to the maximum level marked on the appliance.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not place boiling water or very hot liquid in the appliance.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Warning: Keep the appliance away from flammable materials.

CARE AND MAINTENANCE

STEP 1: Switch off and unplug the egg cooker from the mains power supply. Allow the egg cooker to cool fully before performing any cleaning or maintenance.

STEP 2: Wipe the egg cooker main body with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never immerse the egg cooker main body in water or any other liquid. Do not use harsh or abrasive scourers to clean the egg cooker, as this could cause damage.

Note: The egg cooker should be cleaned after each use.

REMOVING LIMESCALE/SCORCH MARKS

Limescale/scorch marks can develop over time around the heating plate of the egg cooker, affecting the performance and lifespan of the egg cooker. It is recommended to use a commercial descaling agent to remove limescale from the egg cooker regularly, at least once a month.

STEP 1: Add the descaling solution to the heating plate, following the manufacturer's instructions.

STEP 2: Plug in and switch on the egg cooker at the mains power supply, then press the on/off switch to turn on the egg cooker.

STEP 3: After approx. 15 minutes, press the on/off switch to turn off the egg cooker and allow it to cool before emptying the heating plate and wiping it several times with a soft, damp cloth. Leave to dry thoroughly.

Caution: This process will cause steam to escape which could cause scalding. Allow for sufficient ventilation around the egg cooker during this process.

Warning: Do not leave the egg cooker unattended whilst removing limescale.

GETTING STARTED

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

IN THE BOX

Electric Egg Cooker

Lid

Egg Tray

Removable Egg Tray Handle

2 Egg Poachers

Measuring Cup with Piercer

FEATURES

430 W Power

6 Egg Capacity

On/off Button with Indicator Light

Includes Measuring Cup, Removable Egg Tray and Egg Poachers

PROGRESS®

Est. 1931

DESCRIPTION OF PARTS



*Due to continuous product development, the item may differ slightly from that shown.

INSTRUCTIONS FOR USE

BEFORE FIRST USE

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply.

STEP 2: Wipe the egg cooker main body with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Remove all of the accessories and wash them in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the egg cooker main body in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the egg cooker or accessories, as this could cause damage.

STEP 4: Place the egg cooker onto a stable, heat-resistant surface, at a height that is comfortable for the user.

Note: When using the egg cooker the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the egg cooker.

USING THE ELECTRIC EGG COOKER

TO MAKE BOILED EGGS

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply and place it onto a clean, dry, stable surface, at a height that is comfortable for the user.

STEP 2: Remove the lid and then take out the egg tray and egg poachers from the egg cooker.

STEP 3: Determine the desired consistency of the eggs to be cooked (soft, medium or hard boiled eggs). The measuring cup has a water level for each consistency of egg; fill it to the appropriate dot with cold water.

STEP 4: Pour the cold water onto the heating plate and then place the egg tray on top.

STEP 5: Prepare the number of eggs to be cooked (up to 6 eggs at once). Use the egg piercer to create a small hole in the larger end of each egg and then place them securely into the egg tray holes. This will prevent the eggs from breaking during the cooking process.

STEP 6: Place the lid back onto the egg cooker.

STEP 7: Plug in and switch on the egg cooker at the mains power supply.

STEP 8: Press the on/off button on the front of the egg cooker main body; the indicator light will illuminate and the cooking process will begin.

STEP 9: Once the water has completely evaporated and the eggs are cooked, the indicator light will turn off and the egg cooker will automatically switch off.

STEP 10: Remove the lid with caution as steam will be emitted from the egg cooker. Carefully remove the eggs; they will have become hot during the cooking process.

Caution: Do not touch the lid during the cooking process, as it will become extremely hot.

For best results use distilled water, as tap water contains minerals which can cause discoloration of the eggs.

COOKING TIMES FOR BOILED EGGS

Cooking times will vary depending upon the desired result.

Consistency of Egg	Approx. Cooking Time
Soft	8 mins
Medium	10 mins
Hard	12 mins

TO MAKE POACHED EGGS

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply and place it onto a clean, dry, stable surface, at a height that is comfortable for the user.

STEP 2: Remove the lid and then take out the egg tray and egg poachers from the egg cooker.

STEP 3: Fill the measuring cup with cold water to the 'medium 1–3 eggs' dot. Pour the cold water onto the heating plate.

STEP 4: Lightly coat the egg poacher(s) with oil or butter. Break one egg into each poacher.

STEP 5: Place the egg tray onto the egg cooker, place the egg pocher on top of the egg tray and then close the lid.

STEP 6: Plug in and switch on the egg cooker at the mains power supply.

STEP 7: Press the on/off button on the front of the egg cooker main body; the indicator light will illuminate and the cooking process will begin.

STEP 8: Once the water has completely evaporated and the eggs are cooked, the indicator light will turn off and the egg cooker will automatically switch off.

STEP 9: Using a small heat-resistant plastic or wooden spatula, carefully remove the poached eggs from the egg poacher(s). Remove the eggs immediately to prevent over-poaching.

Note: The cooking time is approx. 10 minutes to poach 2 eggs.

STORAGE

Check that the egg cooker is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the egg cooker; wrap it loosely to avoid causing damage.

SPECIFICATIONS

Product Code: EK2783P

Operating Voltage: 220–240 V ~ 50/60 Hz

Power: 430 W

NOTES:

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\frac{1}{=}$)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked $\frac{1}{=}$.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ($\frac{1}{=}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

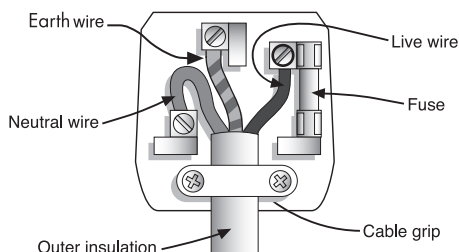

UP GLOBAL SOURCING UK LTD.,
VICTORIA STREET, MANCHESTER OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



CONGRATULATIONS ON YOUR PURCHASE!

Go to **<http://guarantee.upgs.com/progress>** to register your product for a 12 month guarantee within 30 days of purchase.

At Progress, we combine our expert knowledge with our love of cooking and food, to create innovative and stylish products for your kitchen.

For our full range, visit **www.progresscookshop.com**



PROGRESS®

Innovation
& progression
Est. 1931

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.

CD110817/MD040919/V3

