

PROGRESS®

Est. 1931

VEGA
JUG KETTLE

Instruction manual

PROGRESS®

Est. 1931

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not use any power supply base unit other than the one provided with this appliance.

Do not fill the appliance above its max. fill mark. Overfilling the appliance may cause boiling water to be ejected.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Exercise caution when using this appliance, as steam will be emitted from the spout and/or lid, especially whilst refilling.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Always allow the appliance to cool thoroughly before touching or opening the flip-top lid.

Warning: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance. Do not open the lid while the kettle is boiling.

The appliance will become very hot during use; do not touch the appliance and always take care when handling.

Misuse of the appliance could cause injury to the user.

Boil-dry Sensor

If the kettle is accidentally turned on whilst empty, the boil-dry sensor will activate causing the power to switch off. Do not try to use the kettle during this time; once it has cooled down, it will resume its normal function.

Care and Maintenance

Wipe the kettle and power base with a soft, damp cloth then allow to dry thoroughly.

Do not immerse the kettle in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the kettle as this could cause damage.

If the kettle switches off before it has boiled or a white deposit is noticed on the inside of the kettle, it needs to be descaled.

Add a commercial descaling agent to the kettle, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the kettle.

PROGRESS®

Est. 1931

Description of Parts



- | | |
|--------------------------------------|---------------------------|
| 1. Vega Jug Kettle | 6. Max. fill mark (1.7 L) |
| 2. Power base | 7. Water fill gauge |
| 3. Power switch with indicator light | 8. Flip-top lid |
| 4. Handle | 9. Spout |
| 5. Min. fill mark (0.6 L) | 10. Lid release button |

Before First Use

Before using the kettle for the first time, wipe it clean with a soft, damp cloth and dry thoroughly.

Do not immerse the kettle in water or any other liquid.

Fill the kettle to the max. fill mark and boil the water, following the instructions in the section entitled 'Using the Vega Jug Kettle'. After the water has boiled, pour it away. If any slight taste or odour remains in the boiled water, repeat this process.

Note: When using the kettle for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the kettle.

Warning: The kettle or any accessories are not suitable for dishwasher use.

Instructions for Use

Using the Vega Jug Kettle

STEP 1: Check that the kettle is switched off and unplugged from the mains power supply.

STEP 2: Position the power base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

STEP 3: Press the lid release button to open the flip-top lid.

STEP 4: Remove the kettle from the power base and fill the kettle to the desired water level, using the water fill gauge on the side of the kettle as a guide. The water level must be between the min. fill mark and the max. fill mark.

STEP 5: Close the flip-top lid and place the kettle back onto the power base.

STEP 6: Plug in and switch on the kettle at the mains power supply.

STEP 7: Push the power switch downwards to the 'on' position until it clicks; the indicator light will illuminate to signal that the kettle is switched on. Do not touch the body of the kettle during use.

STEP 8: Once the kettle has boiled, the power switch will automatically flip upwards into the 'off' position, causing the indicator light to switch off.

STEP 9: Once the water has stopped boiling vigorously, lift the kettle by the handle and slowly pour out the desired amount of water from the spout. Do not pour the water too quickly as this may cause it to trickle down the side of the kettle.

Caution: Allow the kettle to cool thoroughly before touching or opening the flip-top lid.

Do not use the kettle if the power base or any of the electrical connectors are wet. Do not attempt to dry these whilst the kettle is plugged in.

If the power switch will not stay clicked in the 'on' position, do not force it to stay down. This may cause excess steam to escape from the flip-top lid, damage to the automatic shut-off mechanism or injury to the user.

The body and flip-top lid of the kettle get very hot during use. Do not touch any part of the kettle except the handle whilst it is in use or filled with hot water.

To avoid spilling water or user injury, wait for vigorous boiling to subside before lifting the kettle or pouring water.

PROGRESS®

Est. 1931

Warning: The flip-top lid may spray water if flipped open after boiling – allow the kettle to cool before opening the flip-top lid.

Storage

The kettle must be cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the kettle; wrap it loosely to avoid causing damage.

Specifications

Product code: EK3214

Input: 220–240 V ~ 50/60 Hz

Output: 1850–2200 W

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



PROGRESS®

Est. 1931

Manufactured/imported by:
UP Global Sourcing UK Ltd.,
Edmund-Rumpler- Strabe 5 51149 Koln.
MADE IN CHINA.



CD050220/MD000000/V2