

PROGRESS®

Est. 1931

**TWIN HAND
& STAND MIXER**

Instruction manual

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any attachments other than those supplied.

Do not use any damaged attachments.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not cover the air vents during use, as this may cause the appliance to overheat.

Do not use broken or loose attachments.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

Always place the appliance on a flat, stable surface at a height that is comfortable for the user.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer

PROGRESS®

Est. 1931

or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Care and Maintenance

STEP 1: Switch off and unplug the mixer from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the mixer motor unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the attachments and the mixing bowl in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the mixer motor unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the mixer, as this could cause damage.

The mixer is not suitable for use in a dishwasher.

<p>Note: The mixer should be cleaned after each use.</p>

Description of Parts



- | | |
|---------------------------------------|-------------------|
| 1. Twin Hand & Stand Mixer motor unit | 6. Base stand |
| 2. Speed selector switch | 7. Mixing bowl |
| 3. Turbo button | 8. Mixing beaters |
| 4. Motor unit cradle | 9. Dough hooks |
| 5. Cradle button | 10. Eject button |

Instructions for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly.

Wipe the mixer motor unit with a soft, damp cloth and allow to dry thoroughly.

Never touch the blades; the attachments should be washed using a brush and dried carefully.

Do not immerse the mixer motor unit in water or any other liquid.

Note: When using the mixer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the mixer.

PROGRESS®

Est. 1931

Using the Twin Hand & Stand Mixer

Max. operation time is 1 minute. Allow to cool for 3 minutes before using the mixer again. Do not press the eject button without a secure grip on the attachments, as they may sustain damage if dropped.

Note: The mixer will only operate when the attachments are fitted correctly.

Warning: Do not use the mixing beaters to blend very hot or boiling liquid, as this may cause injury.

Switch off and unplug the mixer from the mains power supply before attempting to remove the mixing beaters or dough hooks and before cleaning.

Using as a Stand Mixer

Before connecting the mixer to the mains power supply, place the mixer motor unit onto the motor unit cradle. Make sure the bottom of the mixer motor unit is clipped into place.

STEP 1: Lift the motor unit cradle into its upright position (45 degrees) using the cradle button on the side of the base stand.

STEP 2: Carefully attach the mixing beaters or dough hooks onto the mixer by aligning the tabs, and pushing in until they click into place through the motor unit cradle into the motor unit and are fully secure.

STEP 3: Add the ingredients into the mixing bowl and place onto the base stand.

STEP 4: Press the cradle button and carefully lower the motor unit cradle to its horizontal position, ensuring that the tabs on the edge of the mixing bowl fit with the tabs underneath the motor unit cradle. This will allow the mixing bowl to rotate during use.

STEP 5: Plug in and switch on the mixer at the mains power supply and move the speed selector switch to the desired speed setting. 0 is the off position, 5 is the highest setting. When the mixer is operating the mixing bowl will automatically rotate. Do not touch the mixing bowl.

STEP 6: Once complete, move the speed selector switch back to '0' to switch off the mixer.

STEP 7: After use, switch off and unplug the mixer from the mains power supply. Lift the motor unit cradle to its upright position by pressing and holding the cradle button. Carefully remove the mixing bowl whilst being careful not to spill the mixture. Remove the mixing or dough hooks by gently pulling them outwards whilst holding down the eject button.

Do not press the eject button without a secure grip on the attachments, as they may drop and sustain damage.

Using as a Hand Mixer

STEP 1: Before connecting the mixer to the mains power supply, carefully attach the mixing beaters or dough hooks onto the mixer motor unit by aligning the tabs and pushing in until

they click into place. Ensure that they are secure before use.

STEP 2: Place the ingredients into the mixing bowl, then plug in and switch on the mixer at the mains power supply.

STEP 3: Lower the attachments into the mixing bowl and then move the speed selector switch to the desired speed setting.

STEP 4: Slowly move the mixer in a clockwise direction to avoid splashing. Once complete, move the speed selector switch back to '0' to switch off the mixer.

STEP 5: After use, switch off and unplug the mixer from the mains power supply. Remove the mixing beaters or dough hooks by gently pulling them outwards whilst holding down the eject button.

Do not press the eject button without a secure grip on the attachments, as they may drop and sustain damage.

Turbo Button

The turbo button is located below the speed selector switch. Press and hold this to activate the highest speed setting; it can also be used to activate a burst of increased mixing speed whilst a different speed setting is active.

Note: The mixer must be switched on for the turbo button to be used. If the switch is set to '0', the turbo button will not do anything.

Attachments

The mixing beaters are ideal for mixing light ingredients such as egg whites, cream and instant desserts. To avoid spillage, it is best to start slowly and build up to the required speed one speed setting at a time.

The dough hooks are ideal for mixing bread dough. For best results, make sure that the dough is not too dry and use a lower speed setting.

Troubleshooting

Problem	Possible Cause	Solution
The mixer will not operate.	The mixer is not connected to the mains power supply.	Plug in and switch on the mixer at the mains power supply.
	The attachments are not securely fitted to the mixer motor unit.	Attach the mixing beaters or dough hooks onto the mixer motor unit by aligning the tabs and pushing in until they click into place.
	The mixer has been used for longer than its recommended max. operation time, which is 1 minute.	Allow the unit to cool for 3 minutes before using the mixer again.
The attachments will not move when in contact with ingredients.	The mixture is too dry.	Add liquid to the mixture.

Storage

Check that the mixer is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the mixer; wrap it loosely to avoid causing damage.

Specifications

Product code: EK3593P
Input: 220–240 V ~ 50 Hz
Output: 200–250 W

Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY – Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

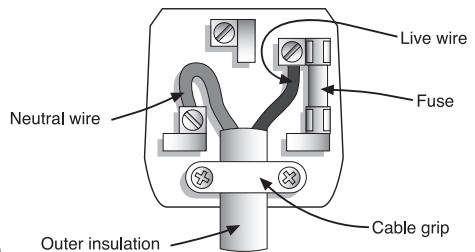

PROGRESS®

Est. 1931

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.progresscookshop.com**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3 YEAR GUARANTEE*

PROGRESS®

Est. 1931

*To be eligible for the extended guarantee,
go to **www.progresscookshop.com** and register
your product within 30 days of purchase.

Find us on 

www.facebook.com/ProgressCookshop

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.
Made in China.
CD210619/MD210120/V2



**ULTIMATE PRODUCTS
HOME OF BRANDS**


Manchester
OL9 0DD
United Kingdom
www.upgs.com

t: +44 (0) 161 627 1400
f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Aminah Mahmood
Date:	02/09/2020
Project Name:	EEK200684 UPG EK3593P IM
Type of Artwork:	Instruction Manual
Size:	A5 11 PP Instruction Manual
Software Used:	Indesign CC20
Typefaces:	TW Cen MT

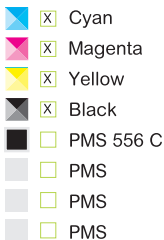

Artwork Version 1

Artwork Scale 1:1

©2020 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY