

PROGRESS®

Est. 1931

**MINI CHOPPER
PRO**

Instruction manual

PROGRESS®

Est. 1931

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children under 8 may not use the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.

Do not overload the appliance as the mixture level may rise during blending.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

PROGRESS®

Est. 1931

Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the chopper from the mains power supply and allow it to cool fully.

STEP 1: Wipe the chopper main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the chopper main unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the chopper, as this could cause damage.

The chopper is not safe for dishwasher use.

Note: The chopper should be cleaned after each use.

Warning: Handle the chopping attachment with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Description of Parts



- | | |
|-------------------------------|----------------------|
| 1. Mini Chopper Pro main unit | 5. Chopping bowl lid |
| 2. On/Off button | 6. Feeding chute |
| 3. Chopping attachment | 7. Pin |
| 4. Chopping bowl | |

Instructions for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly.

Wipe the chopper main unit with a soft, damp cloth and allow to dry thoroughly.

Never touch the blades; the chopping attachment should be washed using a brush and dried carefully.

Do not immerse the chopper main unit in water or any other liquid.

Note: When using the chopper for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the chopper.

PROGRESS®

Est. 1931

Using the Mini Chopper Pro

All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

STEP 1: Place the chopping bowl onto the chopper main unit, aligning the tabs and rotating the chopping bowl in a clockwise direction until it locks into place.

STEP 2: Insert the chopping attachment into the chopping bowl, aligning the tabs on the pin with the blade. Carefully twist in a clockwise direction until it is fixed securely in place.

STEP 3: Add the food to be chopped to the chopping bowl.

STEP 4: Place the lid onto the chopping bowl and secure by aligning the tabs and then twisting it in a clockwise direction until it locks into position.

STEP 5: Plug in and switch on the chopper at the mains power supply.

STEP 6: Holding the chopping bowl steady, press and hold the on/off button until the food is chopped to the required size. Release the on/off button and wait for the blades to stop rotating before removing the chopping bowl lid.

STEP 7: Additional food may be added to the chopped ingredients by removing the chopping bowl lid, adding the ingredients, replacing the lid and repeating the chopping process. Alternatively, oil and seasoning can be added using the feeding chute.

STEP 8: To remove the chopping bowl from the chopper main unit, remove the lid and carefully remove the chopping attachment without touching the blade itself. Twist the chopping bowl in an anticlockwise direction and pull it away from the chopper main unit.

Caution: Switch off and unplug the chopper from the mains power supply before adding or removing food from the chopping bowl.

Warning: Do not operate the chopper without food, as this can cause damage.

Switch off and unplug the chopper from the mains power supply before attempting to remove the chopping attachment and before cleaning.

Max. operation time is 1 ½ minutes. Allow to cool for 1 minute before using the chopper again.

Storage

Check that the chopper is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the chopper; wrap it loosely to avoid causing damage.

Specifications

Product code: EK2182P

Input: 220–240 V ~ 50/60 Hz

Output: 150 W

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



PROGRESS®

Est. 1931

Manufactured by:
UP Global Sourcing UK Ltd.,
Edmund-Rumpler Straße 5,
51149 Köln, Germany.
Made in China.

www.progresscookshop.com

CD211020/MD000000/V1

