

PROGRESS®

Est. 1931

OMBRÉ
HAND MIXER

Instruction manual

PROGRESS®

Est. 1931

Please read all instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any attachments other than those supplied.

Do not use any damaged attachments.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not cover the air vents during use, as this may cause the unit to overheat.

Do not use broken or loose attachments.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting attachments.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

PROGRESS®

Est. 1931

Care and Maintenance

STEP 1: Switch off and unplug the hand mixer from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the hand mixer motor unit with a soft, damp cloth and allow to dry thoroughly.


STEP 3: Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the hand mixer motor unit in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the hand mixer, as this could cause damage.

The hand mixer is not suitable for use in a dishwasher.

Note: The hand mixer should be cleaned after each use.

Description of Parts

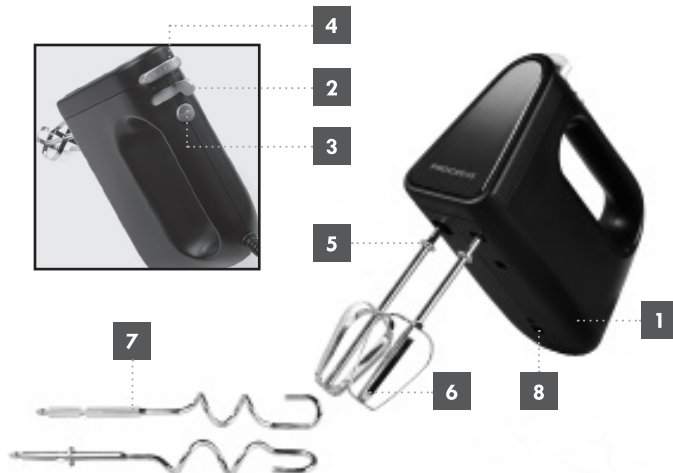

- | | |
|--------------------------------|---------------------------|
| 1. Ombré Hand Mixer motor unit | 5. Attachment slots |
| 2. 5-speed selector switch | 6. Whisk attachments |
| 3. Turbo button | 7. Dough hook attachments |
| 4. Attachment eject button | 8. Air vents |

Instruction for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the hand mixer motor unit with a soft, damp cloth and allow to dry thoroughly. Never touch the blades; the attachments should be washed using a brush and dried carefully.

Note: When using the hand mixer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the hand mixer.

Using the Ombré Hand Mixer

All attachments must be securely fitted before use; do not attempt to remove attachments until they have stopped moving.

Warning: Max. operation time is 3 minutes. Allow to cool for 2 minutes before using the hand mixer again.

With the Whisk Attachments

The whisk attachments are ideal for mixing light ingredients such as egg whites, cream and instant desserts. To avoid spillage, it is best to start slowly and build up to the required speed one setting at a time.

STEP 1: Before connecting the hand mixer to the mains power supply, carefully attach the whisk attachments onto the hand mixer by aligning the tabs, and pushing in until they click into place.

STEP 2: Place the food to be whisked into a mixing jug or bowl, then plug in and switch on the hand mixer at the mains power supply.

STEP 3: With the whisk attachments secure, lower them into the mixing jug and then move the 5-speed selector switch to the desired speed setting.

STEP 4: Slowly move the hand mixer in a clockwise direction to avoid splashing. Once whisking is complete, move the 5-speed selector switch back to '0' to switch off the hand mixer.

STEP 5: After use, unplug the hand mixer from the mains power supply and remove the whisk attachments by gently pulling them outwards whilst holding down the attachment eject button. Do not press the attachment eject button without holding the attachments, as they may drop.

Note: Whilst mixing liquid, especially hot liquid, use a tall container or whisk small quantities at a time to reduce spillage, splattering and the possibility of injury from scalding.

Warning: Do not use the whisk attachments to blend very hot or boiling liquid, as this may cause injury.

Switch off and unplug from the mains power supply before attempting to remove the whisk attachments and before cleaning.

With the Dough Hook Attachments

The dough hook attachments are ideal for mixing bread dough. For best results, make sure that the dough is not too dry to ensure that the dough hooks can work correctly. Dough hooks work best on a lower speed setting.

STEP 1: Before connecting the hand mixer to the mains power supply, carefully attach the dough hook attachments onto the hand mixer by aligning the tabs, and pushing in until they click into place. The dough hook with the end washer should be fitted into the large hole on the left.

STEP 2: Place the food to be kneaded into a mixing jug or bowl, then plug in and switch on the hand mixer at the mains power supply.

STEP 3: With the dough hook attachments secure, lower them into the mixing jug and then move the 5-speed selector switch to the desired speed setting.

STEP 4: Slowly move the hand mixer in a clockwise direction to avoid splashing. Once kneading is complete, move the 5-speed selector switch back to '0' to switch off the hand mixer.

STEP 5: After use, unplug the hand mixer and remove the dough hook attachments by gently pulling them outwards whilst holding down the attachment eject button. Do not press the attachment eject button without holding the attachments, as they may drop.

Note: Whilst mixing liquid, especially hot liquid, use a tall container or knead small quantities at a time to reduce spillage, splattering and the possibility of injury from scalding.

Warning: Do not use the dough hook attachments to blend very hot or boiling liquid, as this may cause injury.

Switch off and unplug from the mains power supply before attempting to remove the dough hook attachments and before cleaning.

Turbo Button

The turbo button is located below the 5-speed selector switch. Press and hold this to activate the highest speed setting; it can also be used to activate a burst of increased mixing speed whilst a different mixing speed is active.

Note: The hand mixer must be switched on for the turbo button to be used. If the switch is set to '0', the turbo button will not activate.

Warning: Do not press the turbo button for longer than 1 minute of continuous use.

Troubleshooting

Problem	Possible Cause	Solution
The hand mixer will not operate.	The hand mixer is not connected to the mains power supply.	Plug in and switch on the hand mixer at the mains power supply.
The attachments will not move when in contact with ingredients.	The mixture is too dry.	Add liquid to the mixture.

Storage

Check that the hand mixer is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the mix hand mixer; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4255PVDEEU7

Input: 220–240 V ~ 50/60 Hz

Output: 250 W

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.progresscookshop.com**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



PROGRESS®

Est. 1931

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.
CD260221/MD000000/V1

