

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the electrical components of

this appliance in water or any other liquid. Do not operate the appliance with wet hands. Do not leave the appliance unattended whilst connected to the mains power supply. Do not move the appliance whilst it is in use. Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

WARNING: Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the hot plate from the mains power supply and allow to cool fully.

STEP 1: Wipe the hot plate base unit and hob with a soft, damp cloth and dry thoroughly.

STEP 2: Clean spillages by applying a small amount of warm water mixed with a mild detergent to the hob, then wipe clean with a soft brush.

Do not immerse the hot plate in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the hot

plate, as this could damage the surface.

NOTE: The hot plate should be cleaned after each use.

Description of Parts



1. Single Hot Plate base unit

2. 1500 W hob

3. Heat indicator light

4. Temperature control dial

5. Cool-touch handle(s)

Instruction for Use

Before First Use

STEP 1: Before connecting to the mains power supply, wipe the hot plate base unit and hob with a soft, damp cloth and dry thoroughly.

STEP 2: Place the hot plate onto a stable, heat-resistant surface, at a height that is comfortable for the user.

STEP 3: Plug in and switch on the hot plate at the mains power supply. Set the temperature control dial to the highest temperature setting and allow to heat up for approx. 5–10 minutes; this will precondition the protective coating. This is the only time that the hot plate should be turned on without a pot or pan placed on top.

NOTE: When using the hot plate for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the hot plate.

Using the Single Hot Plate

STEP 1: Place a pot or pan of an appropriate size onto the hob, dependent on the food to be cooked. It is recommended that the pots or pans used have a solid, even base and are not concave or convex.

STEP 2: Plug in and switch on the hot plate at the mains power supply.

STEP 3: Use the temperature control dial to select the required heat setting; the red heat indicator light will illuminate to signal that the hob is heating up. Once the hob reaches the desired cooking temperature, the heat indicator light will turn off.

STEP 4: Switch off the hot plate by turning the temperature control dial to the '**Off**' position and unplugging it from the mains power supply.

NOTE: During use the heat indicator light will cycle on and off to signal that the hot plate is maintaining the temperature.

CAUTION: The hob may glow red when the hot plate is switched on; it must not be touched. The hob must be clean and clear from debris before use.

To prevent it from overheating, do not use the hot plate if there are no pots or pans placed on the hobs.

WARNING: Nominal voltage is still present even when the temperature control dial is turned to the off position. To fully switch off the hot plate, turn it off at the mains power supply.

Never touch any part of the hot plate when it is in use, as it gets very hot and could cause burns or serious injury.

Do not operate the hot plate if the hob is damaged or cracked in any way.

Storage

Check that the hot plate is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the hot plate; wrap it loosely to avoid causing damage.

Specifications

Product Code: EK4353P

Input: 220—240 V ~ 50—60 Hz

Output: 1500 W

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.progresscookshop.com.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to www.progresscookshop.com/manuals.html and search **EK4353P** to access the instruction manual for your product.

* To be eligible for the extended guarantee, go to guarantee.upgs.com/progress and register your product within 30 days of purchase.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

PROGRESS®

Est. 1931

SINGLE HOT PLATE

Quick Start Guide

FULL INSTRUCTION MANUAL AT
www.progresscookshop.com/manuals.html
PRODUCT CODE: **EK4353P**



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.

Germany. 51149 Köln.

MADE IN CHINA.

www.progresscookshop.com

©Progress trademark. All rights reserved.

CD070421/MD170822/V3

 <p>ULTIMATE PRODUCTS HOME OF BRANDS</p>		<p>Manchester OL9 0DD United Kingdom www.upgs.com</p>
Artworker:	Shelley Huang	
Date:	22/08/2022	
Project Name:	EEK201269 UPG EK4353P	
Type of Artwork:	Quick Guide	
Size:	A4 Folding Leaflet Double-sided	
Software Used:	Indesign CC	
Typefaces:	Tw Cen MT	
<p>  Cyan  Magenta  Yellow  Black  PMS  PMS  PMS  PMS </p>		<p>Artwork Version 3</p> <p>Artwork Scale 1:1</p> <p>©2022 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.</p>

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY