

PROGRESS®

Est. 1931

**DIGITAL
BLENDER
PRO 1500**

Instruction manual

PROGRESS®

Est. 1931

Please retain instructions for future reference

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during blending.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Do not touch sharp blades.

PROGRESS®

Est. 1931

Care and Maintenance

STEP 1: Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

STEP 2: Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender base unit in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the blender or its accessories, as this could cause damage.

The blender and its accessories are not suitable for use in a dishwasher.

Note: The blender should be cleaned after every use.

Warning: Handle the lid attachments with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the accessories.

Description of Parts



1. Digital Blender Pro Blender base unit
2. Control panel
3. Power button
4. Pulse button
5. Low speed setting button
6. Medium speed setting button
7. High speed setting button
8. Speed setting indicator light(s)
9. Six-blade blender lid attachment
10. 1.8 litre blending jug
11. Four-blade sports bottle lid attachment
12. Sports bottle lid
13. Sports bottle

Instructions for Use

Before First Use

Never touch the blades; the attachments should be washed using a brush and dried carefully.

Do not immerse the blender unit in water or any other liquid.

Note: When using the blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

PROGRESS®

Est. 1931

Using the Digital Blender Pro 1500

STEP 1: Position the blender base unit onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Place the desired ingredients into either the blending jug or the sports bottle, making sure not to exceed the max. fill mark.

STEP 3: Pour in a small amount of liquid; this will help to blend the ingredients.

STEP 4: Carefully secure the six-blade blender lid attachment onto the blending jug (or the four-blade sports bottle lid attachment onto the sports bottle) by twisting it in a clockwise direction.

STEP 5: Plug in and switch on the blender at the mains power supply; the power button will flash to indicate that the blender is being powered.

STEP 6: Invert the blending jug/sports bottle and align the tabs on the lid attachment with the corresponding slots on the blender base unit. Turn in a clockwise direction to secure in place.

STEP 7: Press the power button once; it will stop flashing.

STEP 8: To activate the blender, press the low, medium or high speed setting button, or press the pulse button to use the pulse setting. When pressed, the corresponding speed setting indicator light will illuminate.

STEP 9: When blending is finished, switch off and unplug the blender from the mains power supply.

STEP 10: Remove the blending jug/sports bottle by twisting it in an anticlockwise direction and lifting away from the blender base unit.

Note: Check that the lid attachment is securely fitted before use.

Caution: Take care when handling the lid attachments, as the blades may get hot during use.

Warning: Do not blend warm or hot liquid or food, as this may cause a pressure build-up and, in turn, serious injury.

Do not blend for long periods of time. Max. operation time is 30 seconds; allow the blender to cool for 1 minute before using it again. Using the blender for longer than 30 seconds at a time will cause the temperature to increase, which may lead to a pressure build-up. If this happens, switch off and unplug the blender from the mains power supply and allow it to cool thoroughly before attempting to remove the blending jug/sports bottle.

Do not exceed the max. fill mark when adding ingredients to the blending jug/sports bottle, as this could cause spillage and may damage the blender.

Troubleshooting

Symptom	Possible Cause	Solution
The blender will not operate.	The blender is not connected to the mains power supply.	Plug in and switch on the blender at the mains power supply.
	The lid attachment is not correctly secured to the blending jug/sports bottle.	Checking that the threads are correctly aligned, twist the lid attachment in a clockwise direction until secure.
The blended ingredients are lumpy.	There are too many ingredients in the blending cup/sports bottle.	Reduce the amount of ingredients.
The blended ingredients are watery and lacking flavour.	The ingredients have been overblended.	Press the pulse function to activate the pulse setting. Blend in short bursts for best results.
Ice cannot be crushed.		Use ice straight from the freezer for best results.
The blending cup is leaking.	The lid attachment is not correctly secured to the blending jug/sports bottle.	Checking that the threads are correctly aligned, twist the lid attachment in a clockwise direction until secure.

Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4651P

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 1500 W

PROGRESS®

Est. 1931



NUTRITIOUS, HEALTHY SMOOTHIES

Recipe ideas



Method

Roughly chop any large ingredients into pieces no larger than 2 cm to help with the blending process.

Place the ingredients into the blending jug/sports bottle and fit the required lid attachment. Invert the blending jug/sports bottle and secure to the blender base unit.

Blend until the ingredients reach the desired consistency.

Remove the blending jug/sports bottle from the blender base unit and detach the lid attachment.

Serve as desired or fit the sports bottle lid to drink directly from the sports bottle.

Berry Chocanana Krush

Ingredients

10 almonds	½ cup cooked black beans	Top up with water to the maximum fill mark
2 handfuls kale	½ banana	
1 cup blackberries	2 tbsp raw cacao	

Nuts about Nutrition

Ingredients

10 raw cashew nuts	1 orange	½ tsp pure vanilla extract
5 walnuts, halved	½ red bell pepper	Top up with water to the maximum fill mark
2 handfuls kale	½ avocado	

Morning Zing Zinger

Ingredients

2 handfuls spinach	1 tbsp olive oil	Top up with water to the maximum fill mark
1 apple, sliced	¼ cup whole rolled oats	

Berry Chocacado Bliss

Ingredients

2 handfuls spinach	1 cup blueberries	Top up with water to the maximum fill mark
2 tbsp raw cacao powder	½ avocado	

Kapow Papow Zinger

Ingredients

2 handfuls spinach	1 cup papaya	Top up with water to the maximum fill mark
2 tbsp sesame seeds	¼ cup rolled oats	
1 banana		

PROGRESS®

Est. 1931

Wild Thing (You Make My Juice Zing)

Ingredients

2 tbsp sunflower seeds	1 handful parsley	Top up with water to the maximum fill mark
1 cup strawberries	1 tbsp sesame seeds	
1 handful spinach	½ orange	

Citrus Aid

Ingredients

2 cm ginger	½ lemon	Top up with water to the maximum fill mark
2 tbsp honey	½ lime	
1 orange	Sea salt	

Skin Glow Refresher

Ingredients

10 walnuts	1 cup papaya	Top up with water or almond milk to the maximum fill mark
2 handfuls spinach	½ avocado	

Tropical Glow Go-Go-Go

Ingredients

2 handfuls spinach	1 cup papaya	Top up with water to the maximum fill mark
2 tbsp sunflower seeds	1 cup pineapple	

Chanana Cha-Cha-Cha

Ingredients

10 walnuts	1 banana	Top up with water or almond milk to the maximum fill mark
2 handfuls spinach	1 cup cherries (pits removed)	

Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY – Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

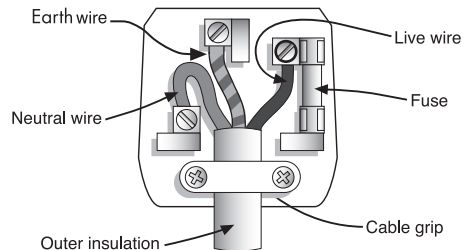

PROGRESS®

Est. 1931

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.progresscookshop.com.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



PROGRESS®

Est. 1931

*To be eligible for the extended guarantee,
go to <https://guarantee.upgs.com/progress/> and
register your product within 30 days of purchase.

Find us on 

www.facebook.com/ProgressCookshop

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

CD260421 / MD000000 / V1

