

**PROGRESS®**

Est. 1931

TASTY TREATS  
**S'MORE MAKER**  
Instruction Manual

# PROGRESS®

Est. 1931

Please instructions retain for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

The outer surface of the appliance may get hot during operation.

# PROGRESS®

Est. 1931



**CAUTION:** Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

**WARNING:** Keep the appliance away from flammable materials. Cooking a marshmallow typically takes approximately 2 minutes. Do not overcook the marshmallow as it may melt and fall onto the heating element.

## Care and Maintenance

Before attempting any cleaning or maintenance, unplug the S'more Maker from the mains power supply and check that it has fully cooled.

Clean the toasting forks, food tray and heating element cover thoroughly in warm, soapy water and dry thoroughly.

Never clean the food tray or heating element cover in a dishwasher.

Do not immerse the S'more Maker base in water or any other liquid; clean it with a damp cloth and dry thoroughly.

## Description of Parts



- |                           |                            |
|---------------------------|----------------------------|
| 1. S'more Maker main unit | 5. Heating element cover   |
| 2. On/off switch          | 6. Food tray               |
| 3. Power indicator light  | 7. Toasting forks (qty. 4) |
| 4. Heating element        |                            |

## Instructions for Use

### Before First Use

**STEP 1:** Before connecting to the mains power supply, wipe the S'more Maker main unit with a soft, damp cloth and dry thoroughly.

**STEP 2:** Clean the toasting forks, food tray and heating element cover in warm, soapy water and dry thoroughly.

Do not immerse the S'more Maker in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the S'more Maker or its accessories, as this could cause damage.

**NOTE:** When using the S'more maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the S'more Maker during use.

It is advised to run the S'more Maker for approx. 5 minutes before first use; this will prevent the initial smoke or odour from affecting the taste of the food.

# PROGRESS®

Est. 1931

## Assembling the S'more Maker

**STEP 1:** Check that the S'more Maker is switched off and unplugged from the mains power supply.

**STEP 2:** Place the food tray onto a stable, heat-resistant surface, at a height that is comfortable for the user.

**STEP 3:** Position the S'more Maker main unit on top of the food tray. Make sure it is flat and stable with the food tray facing upwards. The power cord should run through the indent at the back of the food tray.

**STEP 4:** Place the heating element cover on top of the heating element.

## Using the S'more Maker

**STEP 1:** Once the S'more Maker is assembled, fill the food tray with the desired ingredients.

**STEP 2:** Plug in and switch on the S'more Maker at the mains power supply.

**STEP 3:** Switch on the S'more Maker main unit using the on/off switch. The indicator light will illuminate indicating that the S'more Maker is heating up.

**STEP 4:** After approx. 3 minutes, slide a marshmallow onto the toasting fork. Use the toasting fork to hold the marshmallow approx. 10 cm above the heating element cover for approx. 3 minutes.

**STEP 5:** Once cooked, carefully remove the toasting fork and assemble a S'more as desired.

**STEP 6:** To turn off the S'more Maker, set the on/off switch to the 'off' position and switch off and unplug from the mains power supply.

**NOTE:** Pre-heat the S'more Maker for approx. 5 minutes before use to achieve better toasting results. It is recommended to rotate the marshmallow during toasting to achieve an even melt.

**WARNING:** If food comes into contact with the heating element or heating element cover, immediately switch off the S'more Maker and unplug from the mains power supply. Allow to cool and then clean thoroughly.

The power indicator light will remain illuminated whilst the S'more Maker is in use.

## Storage

Check that the S'more Maker is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the S'more Maker; wrap it loosely to avoid causing damage.

## Troubleshooting

Problem	Possible Cause	Solution
The S'more Maker will not operate.	The S'more Maker is not connected to the mains power supply.	Plug in and switch on the S'more Maker at the mains power supply
	The fuse has blown.	Replace the fuse.
The marshmallows will not melt.	Marshmallows are held too far away from the heating element.	Hold the marshmallows closer to the heating element.
	Marshmallows are not being toasted for long enough.	Allow the S'more Maker to preheat for approx 5 minutes then toast the marshmallow for approx. 3 minutes.
The marshmallows are burnt.	Marshmallows are held over the heating element for too long.	Reduce the length of time marshmallows are held over the heating element.

## Specifications

Product Code: EK4550PRI

Input: 220–240 V ~ 50-60 Hz

Output: 260 W

## Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\frac{\perp}{\equiv}$ )**

**FOR UK USE ONLY** – Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked  $\frac{\perp}{\equiv}$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\frac{\perp}{\equiv}$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

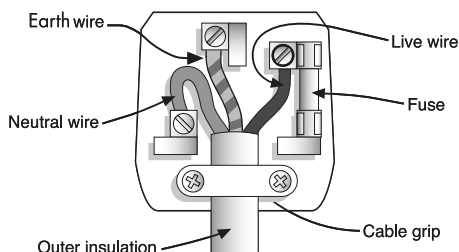



**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.progresscookshop.com](http://www.progresscookshop.com)**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**




This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

# PROGRESS®

Est. 1931

\*To be eligible for the extended guarantee,  
go to **guarantee.upgs.com/progress** and register  
your product within 30 days of purchase.

Find us on 

[www.facebook.com/ProgressCookshop](http://www.facebook.com/ProgressCookshop)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.

**Germany.** 51149 Köln.

Made in China.

©Progress trademark. All rights reserved.

CD031221/MD000000/V1