

PROGRESS®

Est. 1931

**1.5 LITRE
TOASTER OVEN**

Instruction manual

PROGRESS®

Est. 1931

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface or door of the appliance may get hot during operation.

PROGRESS®

Est. 1931

CAUTION: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

WARNING: Keep the appliance away from flammable materials. Keep the appliance well ventilated during use.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the toaster oven from the mains power supply and allow to cool fully.

STEP 1: Wipe the toaster oven housing with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the baking tray, baking tray handle and wire rack in warm, soapy water, then rinse and dry thoroughly.

STEP 3: Remove baked-on food and stubborn stains using a small amount of warm water mixed with a mild detergent, then wipe them clean with a paper towel. Use a nonabrasive scourer if the food is difficult to remove.

Do not immerse the toaster oven in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the toaster oven or its accessories, as this could damage the surface.

NOTE: The toaster oven should be cleaned after every use.

WARNING: The toaster oven and accessories are not suitable for dishwasher use.

Description of Parts



- | | |
|------------------------------------|--------------------------|
| 1. 15 Litre Toaster Oven main unit | 7. Upper heating element |
| 2. Oven door | 8. Lower heating element |
| 3. Temperature control dial | 9. Baking tray |
| 4. Heating element selector dial | 10. Wire rack |
| 5. Timer dial | 11. Tray handle |
| 6. Power indicator light | 12. Oven feet |

Instructions for Use

Before First Use

Clean the toaster oven and accessories according to the instructions outlined in the section entitled 'Care and Maintenance'.

NOTE: When using the toaster oven for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the toaster oven.

Using the 15 Litre Toaster Oven

The temperatures shown on the temperature control dial are comparable to those of a standard electric oven. Due to the size of the toaster oven, cooking times may be slightly shorter. This will vary depending upon the type of food cooked and where the baking tray or wire rack is placed. Always check that food is thoroughly cooked before serving.

NOTE: The power indicator light will remain on whilst the toaster oven is plugged in and the timer is in use.

Do not force the timer to '0'; allow it to run down naturally.

When using the wire rack, it is recommended to place the baking tray beneath it in order to keep the toaster oven clean. The tray handle can be used when fitting or removing the baking tray or wire rack.

CAUTION: Always wear heat-resistant oven gloves when removing hot food, the baking tray or the wire rack from the toaster oven.

WARNING: Never allow food to come into direct contact with the heating elements; always maintain a gap of at least 3 cm.

Using as an Oven

STEP 1: Remove any accessories and then plug in and switch on the toaster oven at the mains power supply.

STEP 2: Prepare the ingredients that are to be cooked.

STEP 3: Turn the temperature control dial to the required heat setting.

STEP 4: Preheat the oven by turning the timer dial to 5 minutes. It is recommended to preheat the oven for at least 5 minutes to avoid temperature fluctuation during use. The power indicator light will remain on whilst the toaster oven is plugged in and the timer is in use.

STEP 5: Using heat-resistant oven gloves, use the handle to open the glass oven door. Place the food to be cooked onto the baking tray or wire rack and then shut the glass oven door. The food should not exceed 3 kg in weight.

STEP 6: Turn the timer dial to the required cooking time. If the food is required to be cooked for longer than 60 minutes, set the timer to the 'ON' position. Check the food periodically; it may be necessary to turn or flip the food during cooking to achieve an even bake.

STEP 7: Once cooking is complete, use heat-resistant oven gloves to carefully open the glass oven door by the handle. Remove the wire rack or baking tray. Turn the timer control dial from 'ON' to the '0' position. If the timer is still running, do not force it to '0'; allow it to run down naturally.

STEP 8: Switch off and unplug the toaster oven from the mains power supply.




NOTE: When placing the baking tray or wire rack in the toaster oven, align with the oven grooves to easily slot in.

During use, the oven door can be left slightly or fully open in order to ventilate during cooking.

Using as a Grill

Follow the instructions in the section entitled 'Using as an Oven' but select only the upper heating element with the heating element selector dial. Then turn the temperature control dial to the required heat setting.

NOTE: The oven door must be kept open when using the grill. Place the wire rack onto the upper groove for optimum grilling.

Heating	Symbol Meaning	Suggested use
	No heating	Switch to this setting to stop cooking early. The toaster oven should be left in this setting when not in use.
	Lower element heating only	Baking cakes, pizzas
	Upper heating element only	Toasting, grilling, cooking thin foods
	Upper and lower heating elements	Roasting meats, oven cooking

Storage

Check that the toaster oven is cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the toaster oven; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4359P

Input: 220–240 V ~ 50–60 Hz

Output: 1200 W

PROGRESS®

Est. 1931

Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY – Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

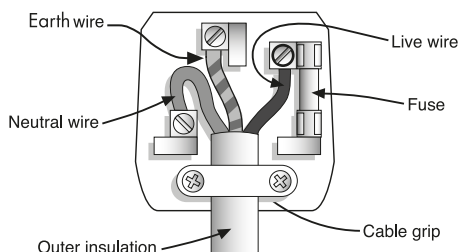

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.progresscookshop.com**

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

PROGRESS®

Est. 1931

*To be eligible for the extended guarantee,
go to **guarantee.upgs.com/progress/** and register your
product within 30 days of purchase.

Find us on 

www.facebook.com/ProgressCookshop

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

MADE IN CHINA.

www.progresscookshop.com

©Progress trademark. All rights reserved.



UK
CA CE

CD031120/MD030222/V2