

**PROGRESS®**

Est. 1931

TREAT SIZE  
**DOUGHNUT MAKER**  
Instruction Manual

# PROGRESS®

Est. 1931

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.  
Do not leave the appliance unattended whilst connected to the mains power supply.  
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not pull or carry the appliance by its power supply cord.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance whilst it is in use.  
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.  
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.  
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.  
Always unplug the appliance after use and before any cleaning or user maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.  
The outer surface of the appliance may get hot during operation.

# PROGRESS®

Est. 1931



**CAUTION:** Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

**WARNING:** Keep the appliance away from flammable materials.

## Care and Maintenance

Before attempting any cleaning or maintenance, unplug the doughnut maker from the mains power supply and check that it has fully cooled.


**STEP 1:** Wipe the doughnut maker housing with a soft, damp cloth and dry thoroughly.

**STEP 2:** Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel. Use a nonabrasive scourer if the food is difficult to remove.

Do not immerse the doughnut maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the doughnut maker or its accessories, as this could damage the surface.

**NOTE:** The doughnut maker should be cleaned after each use.

## Description of Parts

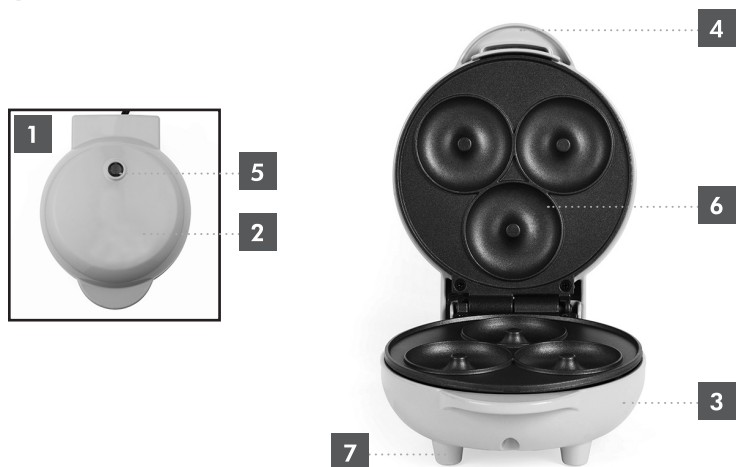

- 1. Doughnut Maker main unit
- 2. Upper housing
- 3. Lower housing
- 4. Cool-touch handle

- 5. Indicator light
- 6. Non-stick coated cooking plates
- 7. Non-slip feet

## Instructions for Use

### Before First Use

**STEP 1:** Check that the doughnut maker is switched off and unplugged from the mains power supply.

**STEP 2:** Wipe the doughnut maker housing with a soft, damp cloth and dry thoroughly.

**STEP 3:** Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

**NOTE:** When using the doughnut maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the doughnut maker.

# PROGRESS®

Est. 1931

## Using the Doughnut Maker

Before each use, carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in with a paper towel. This will help to prolong the life of the non-stick coating and stop the doughnut from sticking.

**STEP 1:** Prepare the doughnut batter.

**STEP 2:** Plug in and switch on the doughnut maker at the mains power supply. The indicator light will illuminate red, signalling that the doughnut maker has been switched on and is heating up.

**STEP 3:** Preheat the doughnut maker for approx. 2 minutes. The indicator light will switch off once the required temperature has been reached.

**STEP 4:** Carefully open the lid using heat-resistant oven gloves.

**STEP 5:** Pour some of the batter into the centre of the lower non-stick coated cooking plate and then carefully close the lid. To avoid spillages, slowly pour a small amount of the batter into the centre of the plate and wait for it to evenly distribute before adding more.

**STEP 6:** Cook for approx. 6–10 minutes or until golden brown; check periodically by carefully opening the lid using heat-resistant gloves. Avoid opening the doughnut maker before 4 minutes of cooking, as this will prevent the doughnuts from rising. If needed, the doughnuts can be cooked a little while longer, until they are browned to preference.

**STEP 7:** Once cooking is complete, use heat-resistant oven gloves to carefully open the lid and then remove the doughnuts with a heat-resistant plastic or wooden spatula. When creating multiple batches of doughnuts, close the lid after removing each batch to maintain the heat.

**STEP 8:** Switch off and unplug the doughnut maker from the mains power supply. Leave the lid open and allow to cool.

**NOTE:** Do not overfill the non-stick coated cooking plate; the batter will expand whilst cooking. It is recommended to fill by  $\frac{2}{3}$ .

Always preheat the non-stick coated cooking plates before starting to cook. During use the red power/temperature indicator will cycle on and off to indicate that the doughnut maker is maintaining the temperature.

**CAUTION:** Exercise caution during cooking; the doughnut maker will emit steam.

**WARNING:** The doughnut maker and cooking plates get very hot during use; always use oven-resistant gloves to avoid injury.

## Hints and Tips

1. If using a batter, slowly pour a small amount into the non-stick coated cooking plates and wait for it to distribute evenly before adding more, to avoid the risk of overfilling.
2. Sieving dry ingredients, such as flour, will help to make a smooth consistency and avoid any lumps.
3. Avoid opening the doughnut maker during cooking, as it will allow heat to escape and prevent bubbles from forming.
4. The best indicator as to when doughnuts are ready is when steam stops escaping from the doughnut maker.
5. Always use butter or cooking oil to precondition the non-stick coated cooking plates. Not only will this help to protect the non-stick coating, it will also make it easier to remove the cooked doughnuts.
6. Using heat-resistant plastic or wooden utensils will help to protect the non-stick coating.
7. If short of time, prepare the ingredients in advance so that all that is left to do is cook the doughnuts.

## Storage

Check that the doughnut maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the doughnut maker; wrap it loosely to avoid causing damage.

## Specifications

Product code: EK4698PURPRI

Input: 220–240 V ~ 50–60 Hz

Output: 550 W

# RECIPES



## Mini Doughnuts

### Ingredients

225 g plain flour

112 g sugar

1 egg

225 ml milk

4 tbsp cooking oil

1 tbsp baking powder

$\frac{1}{2}$  tsp vanilla essence

### Method

Place the flour, sugar and baking powder together into a mixing bowl. Create a well in the centre of the ingredients and add the milk, egg, vanilla and oil.

Using a mixer, mix the ingredients thoroughly to produce a smooth batter. Preheat the doughnut maker and then carefully fill each doughnut well with batter. Ensure that each well is filled by  $\frac{2}{3}$ . Close the doughnut maker and bake for approx. 6–8 minutes or until golden brown.

Test the mini doughnut with a toothpick; if the toothpick comes out clean, the mini doughnuts are ready.

Carefully remove the mini doughnuts using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack or serve warm.

\*Any recipe images used in this instruction manual are intended for illustrative purposes only.



## **Creamy Glaze**

### **Ingredients**

220 g icing sugar  
40 g butter  
2 tbsp hot water  
2 tsp vanilla sugar

### **Method**

Heat the butter in a saucepan until melted, then remove from the heat.

Stir in the icing and vanilla sugar until the mixture is smooth.

Add the water, 1 tbsp at a time until the desired consistency is achieved.

Dip the mini doughnuts into the creamy glaze, top with sprinkles (optional) and place on a wire rack to set.

## **Maple Glaze**

### **Ingredients**

400 g sifted icing sugar  
2 to 2½ tbsp milk  
½ tsp maple extract

### **Method**

Sift the icing sugar into a bowl, then blend in the maple extract and milk to make a glaze consistency.

Dip the mini doughnuts into the maple glaze, top with sprinkles (optional) and place on a wire rack to set.

## **Ice Cream Doughnuts**

### **Method**

Once you've made your Mini Doughnuts, why not try an ice cream filling?

## **Chocolate Glaze**

### **Ingredients**

175 g sifted icing sugar  
2 to 2½ tbsp milk  
2 tbsp cocoa powder  
1 tsp vanilla essence

### **Method**

Sift the icing sugar and cocoa powder into a bowl, then blend in the vanilla essence and milk to make a glaze consistency.

Dip the mini doughnuts into the chocolate glaze, top with sprinkles (optional) and place on a wire rack to set.

## **Vanilla Frosting**

### **Ingredients**

300 g sifted icing sugar  
56 g melted butter  
1 to 1½ tbsp hot water  
1 tsp vanilla essence

### **Method**

Sift the icing sugar into a bowl, then blend in the melted butter, vanilla essence and hot water to create a frosting.

Coat the mini doughnuts with the vanilla frosting, top with sprinkles (optional) and place on a wire rack to cool.

## **Powdered Sugar Coating**

### **Method**

Place 400 g powdered sugar in a paper bag or bowl. Add hot mini doughnuts to the bag or bowl and shake gently until coated.

## **Matcha Doughnuts**

### **Ingredients**

165 g plain flour  
75 g caster sugar  
55 g coconut oil  
1 large egg  
235 ml almond milk  
 $\frac{3}{4}$  tsp baking powder  
 $\frac{1}{2}$  tsp matcha powder  
 $\frac{1}{2}$  tsp vanilla essence  
 $\frac{1}{4}$  tsp sea salt  
 $\frac{1}{8}$  tsp nutmeg  
 $\frac{1}{8}$  tsp baking soda

### **Method**

In a medium bowl, mix the coconut oil, sugar and egg.

Sift in the baking powder, baking soda, matcha powder, nutmeg, salt and mix to combine. Add the vanilla essence and mix.

Begin adding the flour and milk, alternating between them until combined into a smooth batter.

Preheat the doughnut maker and then carefully fill each doughnut well with batter. Ensure that each well is filled by  $\frac{2}{3}$ . Close the doughnut maker and bake for approx. 6–8 minutes or until golden brown.

Test the mini doughnut with a toothpick; if the toothpick comes out clean, the mini doughnuts are ready.

Carefully remove the mini doughnuts using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack or serve warm.

## **Chocolate Doughnuts**

### **Ingredients**

225 g plain flour  
112 g sugar  
112 g cocoa powder  
1 egg  
50 ml milk  
1 tbsp baking powder  
2 tsp vegetable oil  
1 tsp vanilla essence

### **Method**

Place the flour, baking powder, sugar and cocoa powder into a mixing bowl. Create a well in the centre of the ingredients and add the milk, egg, vanilla essence and oil.

Using a mixer, mix the ingredients thoroughly to produce a smooth batter. Preheat the doughnut maker and then carefully fill each doughnut well with batter. Ensure that each well is filled by  $\frac{2}{3}$ . Close the doughnut maker and bake for approx. 6–8 minutes or until golden brown.

Test the mini doughnut with a toothpick; if the toothpick comes out clean, the mini doughnuts are ready.

Carefully remove the mini doughnuts using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack or serve warm.

# PROGRESS®

Est. 1931

## Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** – Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

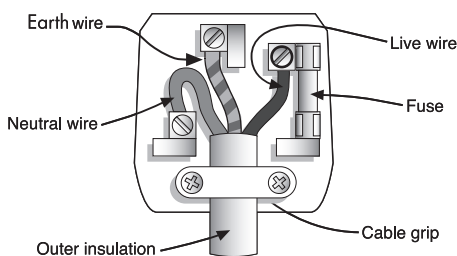

# PROGRESS®

Est. 1931

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.progresscookshop.com](http://www.progresscookshop.com)**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

# PROGRESS®

Est. 1931

\*To be eligible for the extended guarantee,  
go to **guarantee.upgs.com/progress** and register  
your product within 30 days of purchase.

Find us on 

[www.facebook.com/ProgressCookshop](http://www.facebook.com/ProgressCookshop)



Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.  
Made in China.

©Progress trademark. All rights reserved.

CD250422/MD000000/V1