

PROGRESSby



Popcorn Maker

Instruction Manual



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not overload the appliance.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

WARNING: Keep the appliance away from flammable materials.

Care and Maintenance

Switch off and unplug the Popcorn Maker from the mains power supply and allow to cool fully before performing any cleaning or user maintenance.



STEP 1: Wash the top cover and measuring cup in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the Popcorn Maker with a soft, damp cloth and allow to dry thoroughly.

Never immerse the Popcorn Maker in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the Popcorn Maker, as this could cause damage.

NOTE: The Popcorn Maker is not suitable for use in a dishwasher. Always clean the Popcorn Maker before, and immediately after use.

Description of Parts



- 1. Popcorn Maker base unit
- 2. Popcorn inlet
- 3. Popcorn outlet
- 4. On/off switch

- 5. Measuring cup
- 6. Top cover
- 7. Spout
- 8. Aluminium heat chamber

Instructions for Use

Before First Use

Before using the Popcorn Maker for the first time, wipe it down with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Popcorn Maker in water or any other liquid.

NOTE: When using the Popcorn Maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Popcorn Maker.

Using the Popcorn Maker

STEP 1: Place the Popcorn Maker onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Fill the measuring cup to the Max. fill mark with popcorn kernels – this will make two portions. Pour the popcorn kernels into the aluminium heat chamber through the popcorn inlet.

STEP 3: Do not use more than one measuring cup of popcorn at a time, as this will overflow the Popcorn Maker and could result in damage.

STEP 4: Secure the measuring cup onto the top cover to prevent losing any popcorn as it cooks.

STEP 5: Place a large bowl underneath the spout, taking care that the edge of the bowl touches the Popcorn Maker.

STEP 6: Plug in and switch on the Popcorn Maker at the mains power supply. Turn on the Popcorn Maker using the on/off switch.

It will take approx. three minutes for all of the popcorn kernels to pop.

STEP 7: When all of the popcorn is made, turn off the Popcorn Maker using the on/off switch and unplug it from the mains power supply.

Allow the Popcorn Maker to cool for approx. 10–12 minutes before using it again.

WARNING: Some popcorn kernels may not expand or puff properly and may escape from the popcorn outlet during operation. Exercise caution and avoid immediate contact with the popcorn kernels, as they will be very hot. Do not run unit without popcorn kernels inside.

Storage

Check that the Popcorn Maker is cool, clean and dry before storing in a cool, dry place. Never wrap the power supply cord tightly around the Popcorn Maker; wrap it loosely to avoid causing damage.

Specifications

Product code: EK5319WW

Input: 220–240 V ~ 50–60 Hz

Output: 1200 W

PROGRESSby



Recipes

Any recipe images used in this instruction manual
are intended for illustrative purposes only.



Salted Chocolate Pop Corn

1 PersonalPoints™ value per serving

Serves 1

Ingredients

20 g popcorn kernels
1 tsp cocoa powder
1 tsp icing sugar
¼ teaspoon salt
Calorie-controlled cooking spray

Method

Using the measuring cup, add ½ cup of the popcorn kernels into the popcorn inlet. (Half a measuring cup is equal to one serving). Place a large bowl underneath the spout to collect the popped corn. Cook the popcorn kernels for approx. 3 minutes.

Mist the popcorn with cooking spray and transfer to a plastic food bag. Combine the cocoa powder, icing sugar and sea salt in a small bowl, then add to the bag, seal and shake well to coat.



Spicy Popcorn

1 PersonalPoints™ value per serving

Serves 4

Ingredients

80 g popcorn kernels
1 tsp chilli flakes
1 tsp paprika
1 tsp black pepper
¼ tsp salt

Method

Using the measuring cup, add one cup of the popcorn kernels into the popcorn inlet. (One full measuring cup is equal to two servings). Place a large bowl underneath the spout to collect the popped corn. Cook the popcorn kernels for approx. 3 minutes. Repeat for remaining popcorn kernels.

In a small bowl, combine the chilli flakes, paprika and freshly ground black pepper and salt. Sprinkle the mixture over the popcorn and stir to combine.





Herb and Garlic Popcorn

0 PersonalPoints™ value per serving

Serves 4

Ingredients

80 g popcorn kernels
3 g garlic granules
1 lemon zest
Calorie-controlled cooking spray
1 tbsp fresh chives, chopped
1 tbsp fresh parsley, chopped
1 tsp fresh rosemary, chopped



Method

Using the measuring cup, add one cup of the popcorn kernels into the popcorn inlet. (One full measuring cup is equal to two servings). Place a large bowl underneath the spout to collect the popped corn. Cook the popcorn kernels for approx. 3 minutes. Repeat for remaining popcorn kernels.

In a small bowl, add the chopped herbs and combine the lemon and garlic salt. Mist the popcorn with the cooking spray, then scatter over the herb mix and mix well to combine.

Kale and lemon popcorn

0 PersonalPoints™ value per serving

Serves 4

Ingredients

80g popcorn kernels	1/2 tsp salt
4 handfuls of kale, chopped	1/2 lemon zest
Calorie-controlled cooking spray	

Method

Spread the kale on a baking tray and mist with cooking spray and sprinkle over the salt. Bake at 160 °C/Fan 140 °C/Gas Mark 3 for 10 minutes or until crispy. Transfer the kale to a blender along with the lemon zest then blitz.

Using the measuring cup, add one cup of the popcorn kernels into the popcorn inlet. (One full measuring cup is equal to two servings). Place a large bowl underneath the spout to collect the popped corn. Cook the popcorn kernels for approx. 3 minutes. Repeat for remaining popcorn kernels. Sprinkle the kale topping over the popcorn and serve.

Salt and Vinegar Popcorn

1

PersonalPoints™ value per serving

Serves 4

Ingredients

80 g popcorn kernels

6 tsp balsamic vinegar

Calorie-controlled cooking spray

½ tsp salt

Method

Using the measuring cup, add one cup of the popcorn kernels into the popcorn inlet. (One full measuring cup is equal to two servings). Place a large bowl underneath the spout to collect the popped corn. Cook the popcorn kernels for approx. 3 minutes. Repeat for remaining popcorn kernels.

Mist the popcorn with cooking spray. Sprinkle over the salt and drizzle over the balsamic vinegar. Mix well to combine.



Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\equiv)

FOR UK USE ONLY – Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked \equiv .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\equiv).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

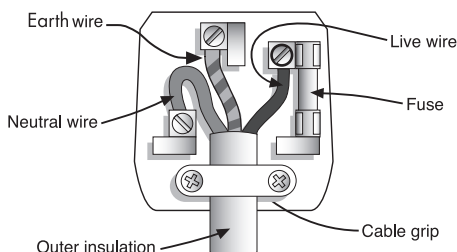

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our WW Customer Services Department via web chat at **www.progresscookshop.com**.

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

PROGRESS_{by}



3 YEAR GUARANTEE*

*To be eligible for the extended guarantee, go to guarantee.upgs.com/progress and register your product within 30 days of purchase.

WW Logo is the trademark of WW International, Inc.
and is used under license by UP Global Sourcing UK Ltd.

©2022 WW International, Inc. All rights reserved.

Manufactured by:

UP Global Sourcing UK Ltd.,

UK. Manchester OL9 0DD.

Germany. 51149 Köln.

Made in China.



CD131022/MD000000/V1