

**PROGRESS®**

Est. 1931

**GLASS**  
**JUG BLENDER**

Instruction manual

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during blending.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not use broken or loose cutting or rotating blades.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

# PROGRESS®

Est. 1931

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance. This appliance is intended for domestic use only. It should not be used for commercial purposes.

**WARNING:** Do not touch sharp blades.

## Dos and Don'ts

### DO:

Check that the stainless steel cross blade attachment is securely fitted before use.

Chop all ingredients into small pieces before blending.

Add a small amount of cold liquid or reduce the quantity of the ingredients in the glass jug if the blades are not running smoothly. If the ingredients do not blend evenly, remove the glass jug from the blender base unit. Shake the glass jug to redistribute the ingredients and then blend once more.

**CAUTION:** Exercise caution when handling the stainless steel cross blade attachment, as the blades may get hot during use. If blending warm ingredients, take care when removing the stainless steel cross blade attachment, as pressure-build up could cause the contents of the blender to spill.

### DO NOT:

Attempt to remove the stainless steel cross blade attachment until the blades have fully stopped moving.

Blend dry ingredients for more than 60 seconds at a time.

**WARNING:** Do not blend hot liquid or food. Never exceed the max. fill mark when adding ingredients to the glass jug, as this could cause spillage and may damage the blender. The blender must not be operated when the glass jug is empty, cracked or broken.

## Care and Maintenance

**STEP 1:** Switch off and unplug the blender from the mains power supply before performing any cleaning or user maintenance.

**STEP 2:** Wipe the blender base unit with a soft, damp cloth and allow to dry thoroughly.

**STEP 3:** Wash all of the accessories, except the cross blade attachment, in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the blender base unit in water or any other liquid.

Never use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage.

**NOTE:** Always clean the blender immediately after each use. The blender is not suitable for use in a dishwasher.

**WARNING:** Handle the stainless steel cross blade attachment with care, as the blades are extremely sharp. Exercise caution when attaching, removing, cleaning, or storing the stainless steel cross blade attachment.

# PROGRESS®

Est. 1931

## Description of Parts



- 1. Blender base unit
- 2. Glass jug
- 3. Stainless steel cross blade attachment
- 4. Rubber gasket

- 5. Jug lid
- 6. Filler cap
- 7. Control dial

## Instructions for Use

### Before First Use

**STEP 1:** Before connecting to the mains power supply, wipe the blender base unit with a soft, damp cloth and dry thoroughly.

**STEP 2:** Clean the accessories in warm, soapy water, then rinse and dry thoroughly. Do not immerse the blender base unit in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the blender or its accessories, as this could cause damage.

**STEP 3:** Place the blender base unit onto a stable, heat-resistant surface, at a height that is comfortable for the user.

**NOTE:** When using the blender for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the blender.

## Using the Glass Jug Blender

**STEP 1:** Position the blender base unit onto a flat, stable surface at a height that is comfortable for the user.

**STEP 2:** Invert the glass jug. To fasten the stainless steel cross blade attachment onto the glass jug, slide it into the glass jug and twist in a clockwise direction until secure.

**STEP 3:** Revert the glass jug so that the stainless steel cross blade attachment is at the bottom. Align the arrows with the blender base unit and then twist the glass jug in a clockwise direction to secure it into place.

**STEP 4:** Chop the ingredients to be blended into small pieces and then place them into the glass jug. Make sure they do not exceed the max. fill mark. The filler cap can be used as a small measuring cup.

**STEP 5:** Pour the required amount of liquid into the glass jug. Make sure it does not exceed the max. fill mark.

**STEP 6:** Fit the jug lid and filler cap on to the glass jug. Plug in and switch on the blender at the mains power supply.

**STEP 7:** To blend the ingredients, turn the control dial to the desired speed setting. Turn the dial to the 'P' position and hold for a few seconds to blend in a short burst. This is useful for more solid foods.

**STEP 8:** Stop the blending process by turning the control dial to the '0' position.

**STEP 9:** Switch off and unplug the blender from the mains power supply.

**STEP 10:** Detach the glass jug from the blender base unit by twisting it in an anticlockwise direction. Proceed to serve.

**STEP 11:** To remove the stainless steel cross blade attachment, invert the glass jug, and carefully twist the stainless steel cross blade attachment in an anticlockwise direction and pull away.

**NOTE:** Always check that the rubber gasket, located on the inside bottom edge of the stainless steel cross blade attachment, is in place. Ingredients can be added whilst the blender is in operation via the filler cap. Twisting the filler cap in an anticlockwise direction and remove. When mixing liquid, use a tall container or blend small quantities at a time to reduce spillage and splattering.

**WARNING:** Maximum operation time is 1 minute. Allow to cool for 1 minute before using the blender again.

## Troubleshooting

Problem	Solution
The blender is not working.	Check the fuse is in working order and does not need to be replaced. Make sure that the glass jug is fully secured onto the blender base unit.

## Storage

Reassemble the blender.

Check that the blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the blender; wrap it loosely to avoid causing damage

## Specifications

Product code: EK4315P

Input: 220–240 V~ 50–60 Hz

Output: 500 W

Maximum operation time: 1 minute, cool for 1 minute.

# PROGRESS®

Est. 1931

## Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**FOR UK USE ONLY** – Plug fitting details  
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

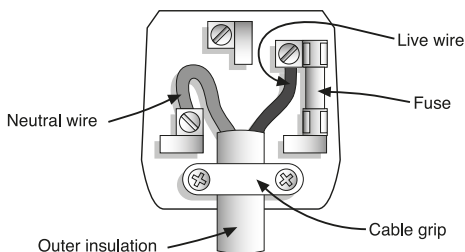

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.  
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.progresscookshop.com](http://www.progresscookshop.com)**

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

### **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment.

■ This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

# PROGRESS®

Est. 1931

To be eligible for the extended guarantee,  
go to **guarantee.upgs.com/progress/** and register your  
product within 30 days of purchase.

Find us on 

[www.facebook.com/ProgressCookshop](http://www.facebook.com/ProgressCookshop)

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

MADE IN CHINA.

[www.progresscookshop.com](http://www.progresscookshop.com)

©Progress trademark. All rights reserved.



**UK  
CA**

CD140322/MD121022/V2