

PROGRESS[®]

Est. 1931

2 IN 1

BLEND AND CHOP

Instruction manual

PROGRESS®

Est. 1931

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use any damaged accessories.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

WARNING: Do not touch sharp blades.

PROGRESS®

Est. 1931

Dos and Don'ts

DO:

Check that the stainless steel cross-blade attachment is securely fitted to the blender bottle before use.

Chop all ingredients into small pieces before blending.

Add a small amount of cold liquid or reduce the quantity of the ingredients in the glass jug/blender bottle if the blades are not running smoothly.

If the ingredients do not blend evenly, remove the glass jug/blender bottle from the blender base unit. Shake the glass jug/blender bottle to redistribute the ingredients and then blend once more.

CAUTION: Exercise caution when handling the stainless steel cross-blade attachment, as the blades may get hot during use. If blending warm ingredients, take care when removing the stainless steel cross-blade attachment, as there may be a pressure build-up from blending, which could cause the blended ingredients to spout from the lid.

DO NOT:

Attempt to remove the stainless steel cross-blade attachment until the blades have fully stopped moving.

Do not place boiling water or very hot liquid in the appliance.

Do not dry blend ingredients; always add a small amount of liquid.

Do not overload the appliance as the mixture level may rise during blending.

Do not use broken or loose cutting or rotating blades.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.

WARNING: Do not blend hot liquid or food. Never exceed the 600 ml/1000 ml mark when adding ingredients to the glass jug/blender bottle, as this could cause spillage and may damage the blender. The blender must not be operated when the glass jug/blender bottle is empty, cracked or broken.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the Blend and Chop from the mains power supply and allow it to fully cool.

STEP 1: Wipe the Blend and Chop main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the Blend and Chop main unit in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the Blend and Chop, as this could cause damage.

NOTE: The Blend and Chop should be cleaned after each use.

WARNING: Handle the attachments with care, as the blades are sharp.

Exercise caution when attaching, removing, cleaning or storing attachments.

Description of Parts



1. 2 in 1 Blend and Chop main unit
2. Power button
3. Blender blade
4. Chopper blade

5. Sports bottle
6. Sports bottle lid
7. 1.2 litre jug
8. 1.2 litre jug lid with spout

PROGRESS®

Est. 1931

Instructions for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly.

Wipe the Blend and Chop main unit with a soft, damp cloth and allow to dry thoroughly.

NOTE: When using the Blend and Chop for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Blend and Chop.

Assembling the 2 in 1 Blend and Chop

All attachments must be securely fitted before use; do not attempt to remove attachments until the blades have stopped moving.

STEP 1: Check that the Blend and Chop main unit is switched off and unplugged from the mains power supply.

STEP 2: Position the Blend and Chop main unit onto a flat, stable surface, at a height that is comfortable for the user. Check that the rubber feet are firmly planted so that the Blend and Chop does not wobble during use.

STEP 3: Select the attachments as desired.

Assembling the Chopper

STEP 1: Place the 1.2 litre jug onto a flat, stable surface at a height that is comfortable for the user.

STEP 2: Remove the 1.2 litre jug lid and place the ingredients into the jug. Replace the jug lid.

STEP 3: Invert the Blend and Chop main unit and place it on top of the 1.2 litre jug. Align the Blend and Chop main unit with the locking tabs on the jug and gently press downwards. Twist in a clockwise direction until locked into place.

Using as a Chopper

STEP 1: Holding the Blend and Chop main unit steady, press and hold the power button until chopping is complete. Wait for the blades to stop rotating before detaching the 1.2 litre jug.

STEP 2: Remove the chopper blade by twisting in an anticlockwise direction and lifting away from the 1.2 litre jug.

Assembling as a Sports Bottle Blender

STEP 1: Place the ingredients into the sports bottle.

STEP 2: Carefully place the blender blade on top of the sports bottle and rotate in a clockwise direction until locked into place.

STEP 3: Invert the sports bottle and place it on top of the Blend and Chop main unit. Align the locking tabs and gently press downwards while twisting in a clockwise direction to lock into place.

Using as a Sports Bottle Blender

STEP 1: Holding the Blend and Chop main unit steady, press and hold the power button until the ingredients are blended. Wait for the blades to stop rotating before detaching the sports bottle.

STEP 2: Remove the blender blade by twisting in an anticlockwise direction and lifting away from the sports bottle.

NOTE: Use a small amount of liquid to help blend ingredients.

Do not exceed the max. fill mark.

Do not operate the blender whilst empty, as this can cause damage.

WARNING: Do not blend warm or hot liquid or food.

Storage

Check that the Blend and Chop main unit and its accessories are cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the Blend and Chop; wrap it loosely to avoid causing damage.

Problem	Possible Cause	Solution
The Blend and Chop will not operate.	The Blend and Chop is not connected to the mains power supply. The Blend and Chop is not correctly assembled.	Plug in and switch on the Blend and Chop at the mains power supply. Check that the Blend and Chop has been correctly assembled and that the attachments are secure.
There are large chunks of ingredients after chopping.	The Blend and Chop has been overfilled.	Remove some of the ingredients and chop in batches.
The sports bottle is leaking.	The sports bottle lid is not fitted correctly.	Checking that the threads are correctly aligned, twist the sports bottle lid in a clockwise direction until secure.

Specifications

Product code: EK5029P

Input: 220–240 V ~ 50–60 Hz

Output: 500 W

PROGRESS®

Est. 1931

Notes

Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY – Plug fitting details

(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

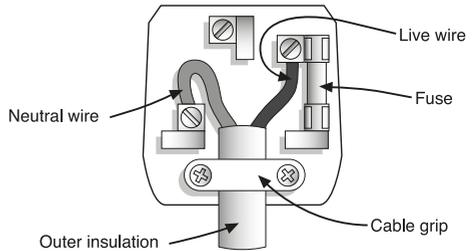

PROGRESS®

Est. 1931

UP Global Sourcing UK Ltd.,

Victoria Street, Manchester OL9 0DD. UK.

Edmund-Rumpler Straße 5, 51149 Köln. Germany.

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.progresscookshop.com**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

PROGRESS®

Est. 1931

To be eligible for the extended guarantee,
go to guarantee.upgs.com/progress and register your
product within 30 days of purchase.

Find us on 

www.facebook.com/ProgressCookshop

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

MADE IN CHINA.

www.progresscookshop.com

©Progress trademark. All rights reserved.



CD050122/MD000000/V1