


User manual

Filter coffee machine



Description of parts

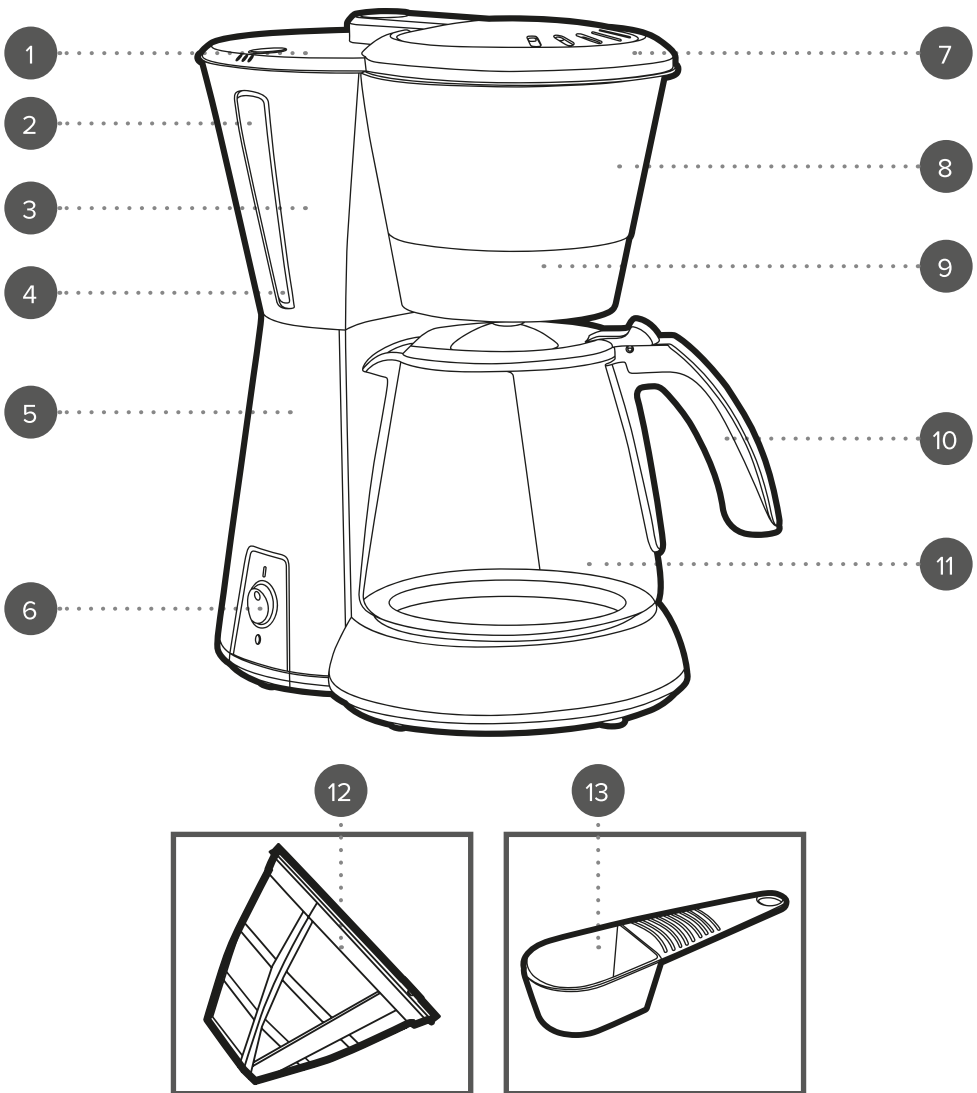

1. Water tank cover
2. Max. fill line (1.5 L)
3. Water tank
4. Min. fill line (600 ml)
5. Coffee machine main unit
6. On/off switch
7. Funnel cover

8. Funnel
9. Brewing chamber
10. Carafe handle
11. Carafe
12. Filter
13. Measuring spoon

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.

- Do not use broken, damaged, or loose attachments.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
- Always unplug the appliance after use and ensure it has cooled fully before performing any cleaning, user maintenance or storing away.
- This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
- Use of an extension cord with the appliance is not recommended.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch the hot section or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Care and maintenance

Before attempting any cleaning or maintenance, unplug the coffee machine from the mains power supply and allow it to cool fully.

STEP 1: Wipe the coffee machine main unit with a soft, damp cloth and allow to dry thoroughly.

Never use harsh or abrasive cleaning detergents or scourers to clean the coffee machine as this could cause damage.

STEP 2: Wash the filter and water tank in warm, soapy water, then rinse and dry thoroughly.



NOTE: The coffee machine should be cleaned after each use. The funnel, carafe and measuring spoon are safe for use in a dishwasher.

Removing limescale



Limescale can develop over time and may affect the performance and lifespan of the coffee machine. It is recommended to descale the coffee machine regularly, at least once every 6–8 weeks, especially if used in a hard water area. Frequent descaling will improve the performance and lifespan of the coffee machine.

STEP 1: Fill the water tank to the max. fill mark with cold water.

STEP 2: Add a commercial descaling agent, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the coffee machine.

STEP 3: Run the coffee machine until it has cycled one carafe of water. Turn the coffee machine off, leave to soak for approx. 15 minutes, and then switch

on again. Repeat until all the water has been cycled.

STEP 4: Empty the carafe. Refill the water tank to the max. fill mark with clean water. Run the coffee machine at least twice more and pour the water away once it has cooled. The coffee machine should now be descaled, clean, and ready for use. If any traces of descaling product residue remain, run more clean water through the coffee machine until it is completely clean.



NOTE: If the coffee machine switches off before it has boiled or a white deposit is noticed on the inside of the water tank, it needs to be descaled.

Instructions for use

Before first use

Before using the coffee machine for the first time, clean the water tank and accessories following the instructions in the section entitled '**Care and maintenance**'.

STEP 1: Before connecting to the mains power supply, position the coffee machine onto a flat, stable, heat-resistant surface at a height that is comfortable for the user. Check that all accessories are in place.

STEP 2: The coffee machine should be used first with water only. Remove the filter from inside the machine.

STEP 3: Fill the water tank, taking care not to exceed the max. fill mark, following the instructions in the section titled '**Filling the water tank**'.

STEP 4: Place the carafe in the coffee machine main unit.

STEP 5: Press the on switch to turn the coffee machine on and start the brewing process.

STEP 6: Once all the water has been brewed, switch off the coffee machine and discard the water from the carafe.



NOTE: When using the coffee machine for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the coffee machine.

Filling the water tank

STEP 1: Turn the water tank cover clockwise to open. Fill the water tank with cold water, ensuring that the water level is above the minimum fill line and below the maximum fill line.

STEP 2: Rotate the water tank cover anticlockwise to close the water tank.



NOTE: For the best results, use cool distilled water when filling the water tank.



CAUTION: Do not overfill the water tank as this could damage the coffee machine.

Using the coffee machine

STEP 1: Make sure the coffee machine is switched off and unplugged from the mains power supply and that all the accessories are in place.

STEP 2: Pour a minimum of 600 ml of cold water into the water tank following the instruction in the section titled '**Filling the water tank**'.

STEP 3: Rotate the funnel cover to open and remove the reusable coffee filter from the brewing

chamber. Add a minimum of 2 measuring spoons (12–14 g) of medium-fine ground coffee to the filter using the spoon.

STEP 4: Gently shake the coffee filter to evenly distribute the ground coffee. Ensure that the ground coffee does not exceed the max. fill mark on the filter.

STEP 5: Place the filter back into the brewing chamber and rotate the funnel cover to close.

STEP 6: Place the carafe into the coffee machine main unit.

STEP 7: Plug in and switch on the coffee machine at the mains power supply.

STEP 8: Press the on/off switch to the '**ON**' position; the red indicator light will illuminate and the brewing process will start.

STEP 9: Once all the coffee has dripped from the brewing chamber into the carafe and the brewing cycle is complete (approx. 4 minutes for min. water level), the coffee machine will activate the keep warm function for approximately 40 minutes. Alternatively, switch off the coffee machine by pressing the on/off switch to the '**OFF**' position.

STEP 10: Remove the carafe from the base. Take care when handling, as the carafe will become hot during operation.



NOTE: Once the brewing cycle button has been pressed, the coffee machine will start the brewing cycle and will remain on until the brewing cycle is complete. To interrupt or stop the brewing cycle, switch off the coffee machine at the mains power supply and unplug it or remove the carafe from the base.



CAUTION: Do not switch on the coffee machine without any water in the water tank. Do not open the water tank cover or funnel cover during the brewing cycle, as this will allow steam to escape and could cause scalding or burns.



WARNING: Allow the coffee machine to cool for approx. 3 minutes before making a second carafe of coffee. If the coffee machine does not cool completely before reuse, water placed in the water reservoir may overheat. This will allow hot steam to escape, which could injure the user.

Hints and tips

1. Always use fresh, cold water to fill the water tank.
2. The quantity of ground coffee can be adapted to taste. For stronger coffee, use more ground coffee, for weaker coffee use less.
3. After using packaged ground coffee, tightly reseal it and store in a cool, dry place.
4. To achieve optimum coffee taste, use whole coffee beans and finely grind them before brewing.
5. Do not reuse ground coffee that has already been used in the coffee maker, as this will greatly reduce the flavour of the coffee.
6. Reheating coffee is not recommended, as it affects the taste.

Anti-drip feature

The coffee machine has an anti-drip feature to prevent coffee leaking out from the brewing chamber when the carafe is removed from its base during the brewing process. This is an automatic feature that is permanently activated.

Storage

The coffee machine must be cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the coffee machine; wrap it loosely to avoid causing damage.

Specifications

Product code: EK6160

Operating voltage: 220–240 V ~ 50/60 Hz

Power: 920–1080 W

UK
CA CE

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD120324/MD000000/V1