

**PROGRESS®**

Est. 1931

**CORDLESS  
HOT PLATE**

Instruction manual

# **PROGRESS®**

Est. 1931

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling

the cord; switch it off and remove the plug by hand.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance whilst it is in use.  
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.  
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.  
Always unplug the appliance after use and before any cleaning or user maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.  
The outer surface of the appliance may get hot during operation.



**Caution:** Hot surface – do not touch the hot section or heating components of the appliance.

**Warning:** Keep the appliance away from flammable materials.

# PROGRESS®

Est. 1931

## **Dos and Don'ts**

### **Do:**

Always preheat the hot plate before use.

Unplug the cordless hot plate from the mains power supply before cleaning.

Take care not to touch the hot plate during or straight after use, as it will get very hot.

Only use heat-resistant containers or dishes with the hot plate.

### **Do not:**

Leave the hot plate unattended whilst it is preheating or keeping food warm.

Carry the hot plate whilst it is being used to keep food warm.

Place food directly onto the hot plate.

Place uncooked or frozen food and meat onto the hot plate.

## **Care and Maintenance**

Before attempting any cleaning or maintenance, unplug the hot plate from the mains power supply and allow to cool fully.

**STEP 1:** Wipe the hot plate base unit with a soft, damp cloth and dry thoroughly.

**STEP 2:** Clean spillages by applying a small amount of warm water mixed with a mild detergent to the hot plate, then wipe them clean with a soft brush.

Do not immerse the hot plate in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the hot plate, as this could damage the surface.

**Note:** The hot plate should be cleaned after each use.

## Description of Parts



- |                             |                                |
|-----------------------------|--------------------------------|
| 1. Hot plate                | 4. Green ready indicator light |
| 2. Cool-touch handles       | 5. Power switch                |
| 3. Red heat indicator light |                                |

## Instructions for Use

### Before First Use

Clean the hot plate following the instructions in the 'Care and Maintenance' section.

**Note:** When using the hot plate for the first time, a slight smoke or odor may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the hot plate.

### Using the Cordless Hot Plate

**STEP 1:** Place the hot plate onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.

**STEP 2:** 15 minutes prior to food being served, plug the hot plate into the mains power supply and turn it on by pressing the power switch to the 'on' position.

**STEP 3:** Preheat the hot plate for 15 minutes; the heat indicator light will illuminate red to signal that the grill is heating up. Once the required temperature has been reached, the heat indicator light will turn off and the ready indicator light will illuminate green.

**STEP 4:** Once the hot plate has heated up, turn it off by pressing the power switch to the 'off' position. Switch off and unplug the hot plate from the mains power supply and detach the power cord before moving.

**STEP 5:** Using the cool-touch handles, carry the hot plate to the dinner table where food will be served and place the dishes onto the hot plate. The hot plate will stay warm for up to 60 minutes.

# PROGRESS®

Est. 1931

**STEP 6:** When the hot plate is no longer in use, allow it to fully cool and then reinsert the power cord for storage.

**Note:** Food to be kept warm on the hot plate must be cooked in advance and should still be hot, as the hot plate is not designed to heat food from cold or frozen.

**Caution:** Carry the hot plate with two hands; position the hot plate away from your body.

## Storage

Check that the hot plate is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the hot plate; wrap it loosely to avoid causing damage.

## Specifications

Product code: EK2610P

Input: 220–240 V ~ 50/60Hz

Output: 1200 W

## Connection to the Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue Neutral (N)**

**Brown Live (L)**

**Green/Yellow Earth ( $\perp$ )**

**FOR UK USE ONLY** – Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt, consult a qualified electrician who will be pleased to do this for you.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

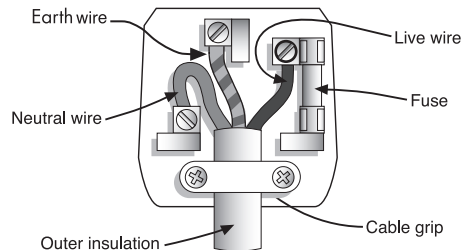

# PROGRESS®

Est. 1931

**UP Global Sourcing UK Ltd.,**

**UK. Manchester OL9 0DD.**

**Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.progresscookshop.com](http://www.progresscookshop.com)**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Progress will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





# PROGRESS®

Est. 1931

\*To be eligible for the extended guarantee,  
go to **[www.progresscookshop.com](http://www.progresscookshop.com)** and register  
your product within 30 days of purchase.

Find us on 

[www.facebook.com/ProgressCookshop](http://www.facebook.com/ProgressCookshop)

Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

Made in China.

CD220721/MD000000/V1

