

PROGRESS®

Est. 1931

**FAMILY
TOASTIE MAKER**

Instruction manual

PROGRESS®

Est. 1931

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains

power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance, as this could cause injury.

Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

PROGRESS®

Est. 1931

Care and Maintenance

STEP 1: Before attempting any cleaning or maintenance, unplug the toastie maker from the mains power supply and allow to fully cool.


STEP 2: Wipe the toastie maker housing with a soft, damp cloth and dry thoroughly.

STEP 3: Remove baked on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe clean with a paper towel or nonabrasive scourer. Do not immerse the toastie maker in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the toastie maker, as this could damage the surface.

Note: The toastie maker should be cleaned after each use.

Description of Parts

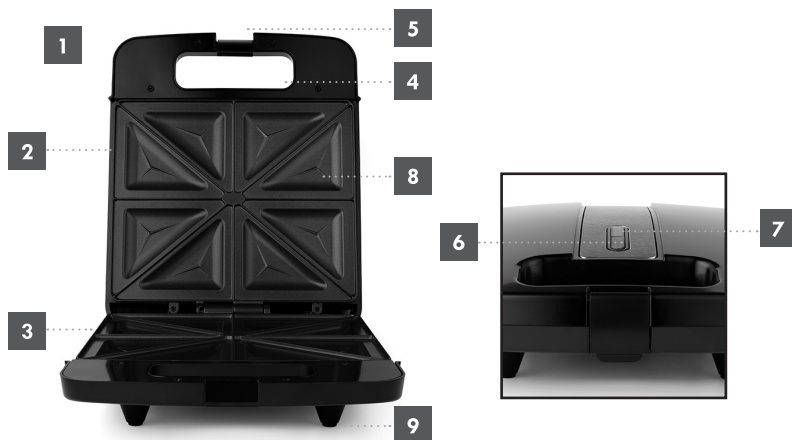

1. Family Toastie Maker main unit

2. Upper housing

3. Lower housing

4. Cool-touch handle

5. Handle lock

6. Red power indicator light

7. Green ready indicator light

8. Non-stick coated cooking plates

9. Non-slip feet

Instructions for Use

Before First Use

STEP 1: Switch off and unplug the toastie maker from the mains power supply.

STEP 2: Wipe the toastie maker housing with a soft, damp cloth and dry thoroughly.

Do not immerse the toastie maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the family toastie maker, as this could cause damage.

Note: When using the toastie maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the toastie maker.

Using the Family Toastie Maker

STEP 1: Prepare the sandwiches that are to be toasted, taking care not to overfill the bread, as this could cause the ingredients to overflow.

STEP 2: Plug in and switch on the toastie maker at the mains power supply. The red power indicator light will illuminate, signalling that the toastie maker has been switched on and is heating up.

STEP 3: Preheat the toastie maker for approx. 2 minutes. The green ready indicator light will illuminate once the required temperature has been reached.

STEP 4: Carefully apply a thin coat of cooking oil to the non-stick coated cooking plates, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating and stop the sandwiches from sticking.

STEP 5: Place the prepared sandwiches onto the lower non-stick coated cooking plate and then close the lid.

STEP 6: Toast the sandwiches for approx. 2–4 minutes; check periodically by carefully opening the lid. If needed, the sandwiches can be cooked a little while longer, until they are browned to preference.

STEP 7: Once cooking is complete, carefully open the lid and remove the toasted sandwiches with a heat-resistant plastic or wooden spatula.

STEP 8: Switch off and unplug the family toastie maker from the mains power supply and allow it to cool by leaving the lid open.

Note: Always preheat the non-stick coated cooking plates before starting to cook. During use the green ready indicator will cycle on and off to signal that the sandwich toaster is maintaining the temperature.

Caution: The non-stick coated cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.

PROGRESS®

Est. 1931

Warning: Exercise caution during cooking; the sandwich toaster will emit steam.

Storage

Before storing in a cool, dry place, make sure that the sandwich toaster is cool, clean and dry.

Never wrap the cord tightly around the sandwich toaster; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4424PVDEEU7

Input: 220–240 V~ 50–60 Hz

Output: 1400 W

TASTY SAVOURY TOASTIES

Recipe ideas



Top Tip for All Recipes:

To create extra crispy toasted sandwiches and to help to prevent sticking, apply a thin layer of sunflower oil to the non-stick coated cooking plates before use.

Cheese and Chorizo

Ingredients

2 slices granary bread	50 g chorizo
50 g cheddar cheese, sliced	

Method

Evenly spread the cheddar cheese and chorizo onto one slice of the granary bread. Add the second slice of granary bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Chicken and Mustard Mayonnaise

Ingredients

2 slices granary bread	1 tbsp French mustard
50 g cooked chicken breast, thinly sliced	Handful of rocket
1 tbsp mayonnaise	

Method

Combine the mustard and mayonnaise in a bowl. Add the chicken and mix well. Evenly spread the mixture onto one slice of the granary bread and then sprinkle on the rocket. Add the second slice of granary bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Camembert and Cranberry

Ingredients

2 slices wholemeal bread	1 tbsp cranberry sauce
50 g Camembert cheese, sliced	Small handful of rocket

Method

Combine the Camembert cheese and cranberry sauce in a bowl. Mix well. Evenly spread the mixture onto one slice of the wholemeal bread and then sprinkle on the rocket. Add the second slice of wholemeal bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Tuna and Cheese Melt

Ingredients

2 slices granary bread	25 g mature cheddar	1 tbsp mayonnaise
50 g tinned tuna	cheese, grated	
steak, drained	½ red onion, finely diced	

Method

Combine the tuna steak, cheddar cheese, red onion and mayonnaise in a bowl. Mix well. Evenly spread the mixture onto one slice of the granary bread. Add the second slice of granary bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Pesto, Mozzarella and Sundried Tomato

Ingredients

2 slices thickly sliced, white bread	50 g mozzarella cheese, sliced
4 sundried tomatoes, sliced	1 tbsp green pesto

Method

Evenly spread the green pesto onto one slice of the white bread and then arrange the sundried tomatoes and mozzarella cheese on top. Add the second slice of white bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Avocado, Tomato and Feta

Ingredients

2 slices granary bread	½ tomato, sliced
30 g feta cheese, crumbled	¼ ripe avocado

Method

Evenly spread the avocado, tomato and feta cheese onto one slice of the granary bread. Add the second slice of granary bread on top, to complete the sandwich. Place the sandwich onto the lower non-stick coated cooking plate. Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Strawberry, Banana and Hazelnut Chocolate

Ingredients

2 slices wholemeal bread
4 strawberries, sliced

½ banana, sliced
1 tbsp hazelnut chocolate spread

Method

Evenly spread the hazelnut chocolate spread onto one slice of the wholemeal bread and then arrange the strawberries and banana on top.

Add the second slice of wholemeal bread on top, to complete the sandwich.

Place the sandwich onto the lower non-stick coated cooking plate.

Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

Caramelised Banana

Ingredients

2 slices wholemeal bread
1 banana, sliced

1 tbsp brown sugar
1 tbsp butter

Pinch of ground cinnamon

Method

Using a frying pan, cook the banana in the butter for approx. 30 seconds.

Add the sugar and cinnamon to the frying pan and cook until the sugar has dissolved.

Evenly spread the mixture onto one slice of the wholemeal bread.

Add the second slice of wholemeal bread on top, to complete the sandwich.

Place the sandwich onto the lower non-stick coated cooking plate.

Close the lid and then cook the sandwich for approx. 3–4 minutes, until crispy.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.progresscookshop.com**.

Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



PROGRESS®

Est. 1931



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

CD061020/MD000000/V1